SI 50TE
SI 75TE
SI 100TE
SI 130TE

Dimplex

Montage- und Gebrauchsanweisung

Installation and Operating Instructions

Instructions d'installation et d'utilisation

Deutsch

English

Français

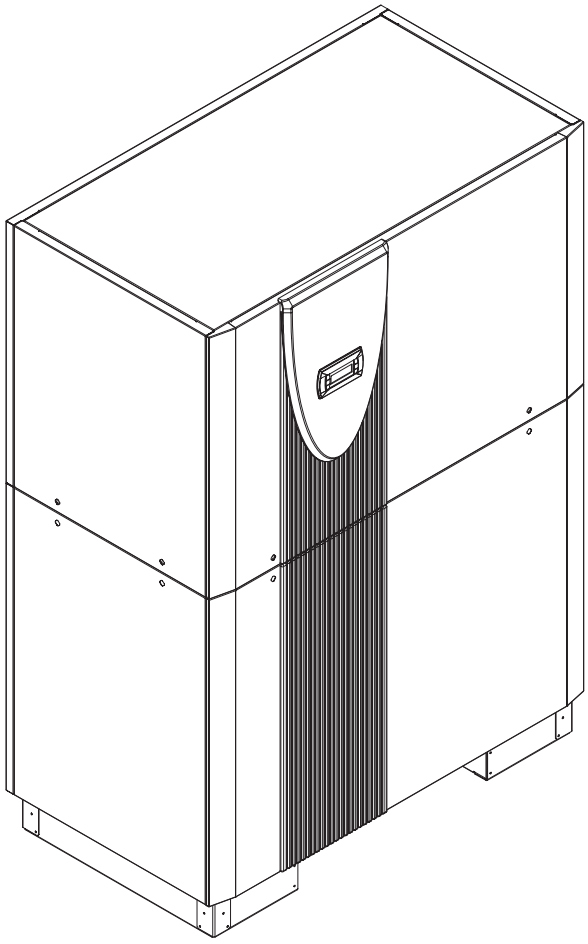

Sole/Wasser-Wärmepumpe für Innenaufstellung

Brine-to-Water Heat Pump for Indoor Installation

Pompe à chaleur eau glycolée-eau pour installation intérieure

Bestell-Nr. / Order no. / N° de commande : 452234.66.02

FD 8609

Table of contents

1 Read immediately E-2

1.1 Important Information E-2
1.2 Legal Provisions and Guidelines E-2
1.3 Energy-Efficient Use of the Heat Pump E-2

2 Purpose of the heat pump E-2

2.1 Application E-2
2.2 Principle of Operation E-2

3 Baseline Unit E-3

4 Accessories E-3

4.1 Connecting Flanges E-3

5 Transport E-3

6 Installation E-4

6.1 General Information E-4
6.2 Sound Emissions E-4

7 Mounting E-4

7.1 General Information E-4
7.2 Connection on Heating Side E-4
7.3 Connection on Heat Source Side E-4
7.4 Electrical Connection E-4

8 Commissioning E-5

8.1 General Information E-5
8.2 Preparatory Steps E-5
8.3 Commissioning Procedure E-5

9 Care/Cleaning E-6

9.1 Care E-6
9.2 Cleaning og Heating Side E-6
9.3 Cleaning of Heat Source Side E-6

10 Malfunctions / Troubleshooting E-6

11 Decommissioning / Disposal E-6

12 Equipment Data E-7

Anhang / Appendix / Annexes ..... A-I

English

1 Read immediately

1.1 Important Information

⚠ ATTENTION!
Any work on the heat pump may only be performed by an authorised and qualified customer service.

⚠ ATTENTION!
The heat pump must not be tilted more than max. 45° (in either direction).

⚠ ATTENTION!
The transport securing devices must be removed prior to commissioning.

⚠ ATTENTION!
The heating system must be flushed prior to connecting the heat pump.

⚠ ATTENTION!
The supplied strainer must be fitted in the heat source inlet of the heat pump in order to protect the evaporator against the ingress of impurities.

⚠ ATTENTION!
The brine solution must contain at least 25 % of an antifreeze agent on a mono-ethylene glycol or propylene glycol basis and must be mixed prior to filling.

⚠ ATTENTION!
The clockwise phase sequence must be observed when connecting the load lines (the heat pump will deliver no output and will be very noisy when the phase sequence is incorrect).

⚠ ATTENTION!
Commissioning is to be effected in accordance with the installation and operating manual of the heat pump controller.

⚠ ATTENTION!
To prevent the accumulation of deposits (e.g. rust) we recommend using a suitable corrosion protection system.

⚠ ATTENTION!
Disconnect all electrical circuits from the power supply before opening the enclosure.

1.2 Legal Provisions and Guidelines

This heat pump conforms to all relevant DIN/VDE regulations and EU directives. For details refer to the EC Declaration of Conformity in the appendix.

The electrical connection of the heat pump must be performed according to and conforming with all relevant VDE, EN and IEC standards. Beyond that, the connection requirements of the local utility companies have to be observed.

The heat pump is to be connected to the heat source and heat distribution systems in accord-ance with all applicable provisions.

⚠ ATTENTION!
Any work on the heat pump may only be performed by an authorised and qualified customer service.

1.3 Energy-Efficient Use of the Heat Pump

By operating this heat pump you contribute to the protection of our environment. A prerequisite for an efficient operation is the proper design and sizing of the heating system and the heat source system. In particular, it is important to keep water flow temperatures as low as possible. All energy consumers connected should therefore be suitable for low flow temperatures. A 1 K higher heating water temperature corresponds to an increase in power consumption of approx. 2.5 %. Low-temperature heating systems with flow temperatures between 30 °C and 50 °C are optimally suited for energy-efficient operation.

2 Purpose of the heat pump

2.1 Application

The brine-to-water heat pump is designed for use in existing or newly built heating systems. Brine is used as the heat carrier in the heat source system. Ground coils, ground collectors or similar systems can be used as the heat source.

2.2 Principle of Operation

The heat generated by the sun, wind and rain is stored in the ground. This heat stored in the ground is collected at low temperature by the brine circulating in the ground collector, ground coil or similar device.

A circulating pump then conveys the warmed brine to the evaporator of the heat pump. There, the heat is given off to the refrigerant in the refrigeration cycle. When so doing, the brine cools so that it can again take up heat energy in the brine circuit.

The refrigerant is drawn in by the electrically driven compressor, is compressed and "pumped" to a higher temperature level. The electrical power needed to run the compressor is not lost in this process, but most of the generated heat is transferred to the refrigerant.

Subsequently, the refrigerant is passed through the condenser where it transfers its heat energy to the heating water. Based on the thermostat setting, the heating water is thus heated to up to 60 °C.

3 Baseline Unit

The baseline unit consists of a heat pump, ready for connection, for indoor installation, complete with sheet metal cabinet, control box and integrated controller. The refrigeration cycle contains the refrigerant R404A. Refrigerant R404A is CFC-free, non-ozone depleting and non-combustible.

All components required for the operation of the heat pump are located in the control box. A sensor for the external wall temperature including mounting hardware as well as a strainer are supplied with the heat pump. The voltage supply for the load and control current must be provided by the customer.

The control wire of the brine pump (to be provided by the customer) is to be connected to the control box. When so doing, a motor protecting device is to be installed, if required.

The collector including the brine manifold must be provided by the customer.

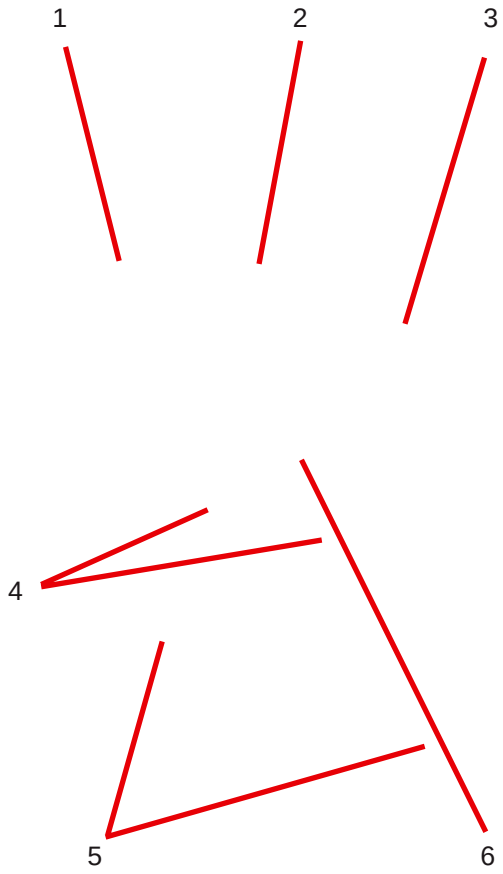

1) Control
2) Evaporator
3) Condenser
4) Compressor
5) Transport securing devices
6) Filter drier

4 Accessories

4.1 Connecting Flanges

The use of flat-sealing connecting flanges allows the unit, as an option, to be connected by means of flanges.

5 Transport

For the transport by means of a hand truck or boiler trolley, position the latter under the front end of the unit below the transport security device.

For transport on a level surface, the unit can be lifted from the rear or from the front by means of a lift truck or forklift. In this case, the transport securing device is not imperative.

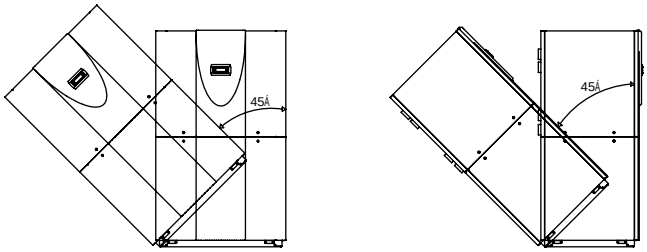

⚠ ATTENTION!

The heat pump must not be tilted more than max. 45° (in either direction).

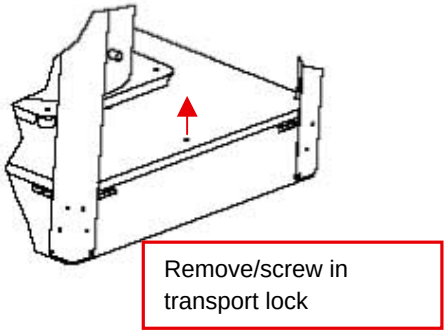

After the transport, the transport securing device is to be removed on either side at the bottom of the unit.

⚠ ATTENTION!

The transport securing device is to be removed prior to commissioning.

To remove the panelling, open the individual covers by unscrewing the respective turn-lock fasteners and then gently tilting the covers away from the device. Then lift them up out of the mountings.

English

6 Installation

6.1 General Information

As a rule, the unit must be installed indoors on a level, smooth and horizontal surface. The entire base frame should make full contact with the surface in order to ensure adequate sound insulation. Failing this, additional sound insulation measures may become necessary.

The heat pump should be installed to allow easy maintenance/ service access. This is ensured if a clearance of approx. 1 m in front of the heat pump is maintained.

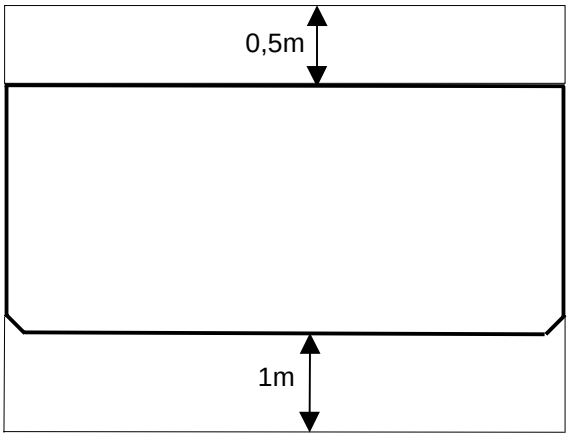

6.2 Sound Emissions

The heat pump offers silent operation due to efficient sound insulation. Any vibration transmission to the foundation or the heating system can be largely prevented by internal sound decoupling measures.

7 Mounting

7.1 General Information

The following connections need to be estab-lished on the heat pump:

- supply/return flow of the brine system
- supply/return flow of the heating system
- power supply

7.2 Connection on Heating Side

⚠ ATTENTION!
The heating system must be flushed prior to connecting the heat pump.

Before completing the heat pump connections on the heating water side, the heating installation must be flushed in order to remove any impurities that may be present, as well as residues of sealing material, and the like. Any accumulation of deposits in the condenser may result in a total failure of the heat pump.

Once the installation on the heating side has been completed, the heating system must be filled, de-aerated and pressure-tested.

Heating water minimum flow rate

The heating water minimum flow rate through the heat pump must be assured in all operating states of the heating system. This can be accomplished, for example, by installing a differential pressure-free manifold or an overflow valve. The procedure for setting an overflow valve is described in the Chapter Commissioning.

Frost protection for installations prone to frost

Provided the controller and heating circulating pumps are ready for operation, the frost protection feature of the controller is active. If the heat pump is taken out of service or in the event of a power failure, the system has to be drained. In heat pump installations where a power failure cannot be readily detected (holiday house), the heating circuit must contain a suitable antifreeze product.

7.3 Connection on Heat Source Side

The following procedure must be observed when making the connection:

Connect the brine line to the flow and return pipe of the heat pump.

The hydraulic plumbing diagram must be observed here.

⚠ ATTENTION!
The supplied strainer must be fitted in the heat source inlet of the heat pump in order to protect the evaporator against the ingress of impurities.

In addition, a microbubble deaerator must be installed in the heat source system.

The brine liquid must be produced prior to charging the system. The brine concentration must be at least 25 %. Freeze protection down to -14°C can thus be ensured.

Only antifreeze products on the basis of mono-ethylene glycol or propylene glycol may be used.

The heat source system must be vented (de-aerated) and checked for leaks.

⚠ ATTENTION!
The brine solution must contain at least 25 % of an antifreeze agent on a mono-ethylene glycol or propylene glycol basis and must be mixed prior to filling.

7.4 Electrical Connection

The following electrical connections must be established on the heat pump:

- Connection of the control wire to terminals X1: L/N/PE in the control box of the heat pump.
- Connection of the load wire to terminals X5: L1/L2/L3/PE in the control box of the heat pump.
- Connection of the brine pump (to be supplied by the customer) to terminal PE and pump contactor K5: 2/4/6 on the control panel of the HP.

All electrical components required for the operation of the heat pump are located in the control box.

For more detailed instructions concerning the connection and functioning of the heat pump controller (e.g. the supplied external wall sensor) please refer to the enclosed operating manual of the controller.

An automatic circuit-breaker with simultaneous tripping of all external conductors is to be provided in the load power supply. The circuit-breaker must be an all-pole disconnect device with a contact gap of at least 3 mm. The same applies to any additional disable contactors that may be required, e.g. during shut-off periods imposed by the utility company. The required cross-sectional area of the conductors is to be selected according to the power consumption of the heat pump, the technical connection requirements of the relevant utility company and all applicable regulations. Power consumption data of the heat pump is provided in the product literature and on the nameplate. The terminals are designed for a max. conductor cross-section of 35 mm².

⚠ ATTENTION!

The clockwise phase sequence must be observed when connecting the load lines (the heat pump will deliver no output and will be very noisy when the phase sequence is incorrect).

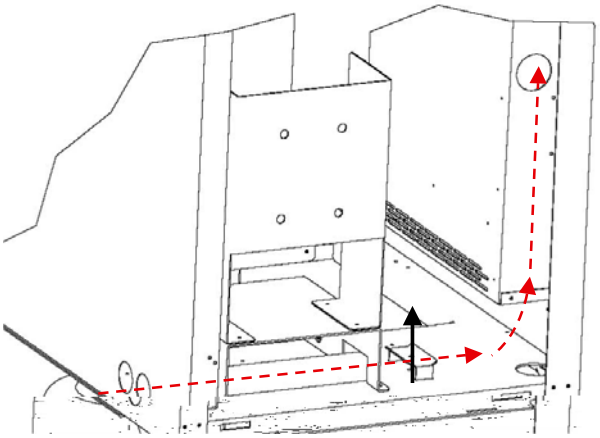

The power cable must be run through the guide tubes, inserted into the side of the control box and secured by means of the strain relief.

8 Commissioning

8.1 General Information

To ensure proper commissioning it should be carried out by a customer service authorised by the manufacturer. This will lead, under certain circumstances, to an extension of the warranty period (cf. Warranty).

8.2 Preparatory Steps

Prior to commissioning, the following items need to be checked:

- All connections of the heat pump must have been made as described in Chapter 7.
- The heat source system and the heating circuit must have been filled and checked.
- The strainer must have been fitted in the sole inlet of the heat pump.
- In the brine and heating circuits all valves that might impair the proper flow must be open.
- The settings of the heat pump controller must be adapted to the heating installation in accordance with the instructions contained in the controller's operating manual.

8.3 Commissioning Procedure

The start-up of the heat pump is effected via the heat pump controller.

⚠ ATTENTION!

Commissioning is to be effected in accordance with the installation and operating manual of the heat pump controller.

Where an overflow valve is fitted to assure the minimum heating water flow rate, the valve must be set in accordance with the requirements of the heating installation. An incorrect setting may result in various error symptoms and an increased elec-tric power consumption. To correctly set the overflow valve, the following procedure is recommended:

Close all of the heating circuits which may also be closed during operation (depending on the type of heat pump usage) so that the least favourable operating state - with respect to the water flow rate - is achieved. Normally, these heating circuits are those of the rooms located on the south and west sides of buildings. At least one heating circuit must remain open (e.g. bathroom).

The overflow valve is to be opened to such an extent that based on the current heat source temperature the maximum temperature difference between heating supply and return flow temperature is obtained, as indicated in the table below. The temperature difference should be measured as closely to the heat pump as possible. In mono-energetic systems, the electric heating element is to be deactivated.

Heat source temperature		max. difference between heating supply and return temperature
from	to	
-5° C	0° C	10 K
1° C	5° C	11 K
6° C	9° C	12 K
10° C	14° C	13 K
15° C	20° C	14 K
21° C	25° C	15 K

Any malfunctions occurring during operation are displayed on the heat pump controller and can be corrected as described in the operating manual of the heat pump controller.

English

9 Care/Cleaning

9.1 Care

The heat pump is maintenance-free. To prevent malfunctions due to sediments in the heat exchangers, care must be taken that no im-purities can enter the heat source system and the heating installation. In the event that operating malfunctions due to contamination occur nevertheless, the system should be cleaned as described below.

9.2 Cleaning og Heating Side

The ingress of oxygen into the heating water circuit, in particular if it contains steel components, may result in the formation of oxidation products (rust). These can enter the heating system via valves, circulating pumps or plastic tubing. It is therefore important - in particular with respect to the piping of underfloor heating systems - that the installation be executed in a diffusion-proof manner.

⚠ ATTENTION!
To prevent the accumulation of deposits (e.g. rust) we recommend using a suitable corrosion protection system.

In the case of severe contamination leading to a reduction in the performance of the condenser in the heat pump, the system must be cleaned by a heating technician.

Based on current knowledge, we recommend cleaning with a 5% phosphoric acid solution or, in the case that cleaning needs to be performed more frequently, with a 5% formic acid solution.

In either case, the cleaning fluid should be at room temperature. It is recommended that the heat exchanger be cleaned in the direction opposite to the normal flow direction.

To prevent acidic cleaning agents from entering the circuit of the heating installation we recommend that the flushing device be fitted directly to the supply and return lines of the condenser of the heat pump.

Thereafter the system must be thoroughly flushed using appropriate neutralising agents in order to prevent any damage caused by cleaning agent residues that may still be present in the system.

All acids must be used with great care, all relevant regulations of the employers' liability insurance associations must be adhered to.

If in doubt, contact the manufacturer of the chemicals!

9.3 Cleaning of Heat Source Side

⚠ ATTENTION!
The supplied strainer must be fitted in the heat source inlet of the heat pump in order to protect the evaporator against the ingress of impurities.

The filter screen of the strainer should be cleaned one day after commissioning, thereafter every week. If no more contamination can be noticed any more, the strainer filter can be removed in order to reduce pressure losses.

10 Malfunctions / Troubleshooting

This heat pump is a quality product and designed for trouble- and maintenance-free operation. In the event that a malfunction occurs nevertheless, it will be indicated on the display of the heat pump controller. Simply consult the Malfunctions and Troubleshooting table contained in the in-stallation and operating manual of the heat pump controller (manager).

If you cannot correct the malfunction yourself, please contact the after-sales service agent in charge.

⚠ ATTENTION!
All work on the heat pump may only be performed by an authorised an qualified after-sales service.

⚠ ATTENTION!
Disconnect all electrical circuits from the power supply before opening the enclosure.

11 Decommissioning / Disposal

Before removing the heat pump, disconnect the unit from the power source and close all valves.

Environment-relevant requirements regarding the recovery, recycling and disposal of service fuels and components in accordance with all relevant standards must be adhered to. Particular attention must hereby be paid to the proper disposal of refrigerants and refrigeration oils.

12 Equipment Data

Device information for brine-to-water heat pumps (heating only)								
1	**Type and order code**				**SI 50TE**	**SI 75TE**	**SI 100TE**	**SI 130TE**
2	**Design**							
2.1	**Degree of protection according to EN 60 529**				IP21	IP21	IP21	IP 21
2.2	**Installation location**				Indoors	Indoors	Indoors	Indoors
3	**Performance data**							
3.1	**Operating temperature limits:**							
	Heating water flow		**°C**		up to 60	up to 60	up to 60	up to 60
	Brine (heat source)		**°C**		-5 to +25	-5 to +25	-5 to +25	-5 to +25
	Antifreeze				Monoethylene glycol	Monoethylene glycol	Monoethylene glycol	Monoethylene glycol
	Minimum brine concentration (-13 °C freezing temperature)				25%	25%	25%	25%
3.2	**Temperature spread of heating water (flow/return flow) at B0 / W35K**				8.9	9.9	9.7	9.4
3.3	**Heat output / COP**	**at B-5 / W55 [1]**	**kW / ---**	**[2]**	37.5 / 2.4	59.8 / 2.3	76.2 / 2.5	102.1 / 2.3
			kW / ---	**[3]**	15.0 / 2.1	30.1 / 2.2	33.6 / 2.4	40.3 / 2.0
		at B0 / W50 [1]	**kW / ---**	**[2]**	43.8 / 3.0	69.8 / 2.9	87.9 / 3.1	117.0 / 2.9
			kW / ---	**[3]**	18.5 / 2.5	33.3 / 2.8	39.1 / 2.8	51.0 / 2.4
		at B0 / W35 [1]	**kW / ---**	**[2]**	46.7 / 4.5	75.2 / 4.4	96.3 / 4.6	125.8 / 4.3
			kW / ---	**[3]**	23.0 / 4.4	37.6 / 4.3	48.4 / 4.6	63.3 / 4.2
3.4	**Sound power level**		**dB(A)**		65	69	71	73
3.5	**Sound pressure level at a distance of 1 m**		**dB(A)**		50	54	55	56
3.6	**Heating water flow with an internal pressure differential of m³/h / Pa**				4.5 / 2000	6.5 / 2500	8.5 / 3600	11.5 / 2200
3.7	**Brine throughput with an internal pressure differential (heat source) of m³/h / Pa**				12.8 / 15700	20.5 / 17800	24.0 / 18600	34.0 / 26200
3.8	**Refrigerant; total filling weight**		**type / kg**		R404A / 8.6	R404A / 14.1	R404A / 20.5	R404A / 27.0
4	**Dimensions, connections and weight**							
4.1	**Device dimensions without connections [4]**		**H x W x L mm**		1,890 x 1350 x 775	1,890 x 1350 x 775	1,890 x 1350 x 775	1,890 x 1350 x 775
4.2	**Device connections to heating system**		**Inch**		G 1 1/2" internal/ external	G 2" internal/ external	G 2" internal/ external	G 2 1/2" internal/ external
4.3	**Device connections to heat source**		**Inch**		G 2 1/2" internal/ external	G 2 1/2" internal/ external	G 3" internal/ external	G 3" internal/ external
4.4	**Weight of the transportable unit(s) incl. packing**		**kg**		486	571	652	860
5	**Electrical connection**							
5.1	**Nominal voltage; fuse protection**		**V / A**		400 / 50	400 / 63	400 / 80	400 / 80
5.2	**Nominal power consumption [1] B0 W35**		**kW**		10.45	16.95	20.93	29.24
5.3	**Starting current with soft starter**		**A**		56	105	120	115
5.4	**Nominal current B0 W35 / cos φ**		**A / ---**		18.9 / 0.8	30.58 / 0.8	37.8 / 0.8	52.76 / 0.8
6	**Complies with the European safety regulations**				[5]	[5]	[5]	[5]
7	**Additional model features**							
7.1	**Water in device protected against freezing [6]**				Yes	Yes	Yes	Yes
7.2	**Performance levels**				2	2	2	2
7.3	**Controller internal/external**				Internal	Internal	Internal	Internal

1. This data indicates the size and capacity of the system. For an analysis of the economic and energy efficiency of the system, both the bivalence point and the regulation should also be taken into consideration. The specified values, e.g. B10 / W55, have the following meaning: Heat source temperature 10 °C and heating water flow temperature 55 °C.
2. Operation with 2 compressor
3. Operation with 1 compressors
4. Note that additional space is required for pipe connections, operation and maintenance.
5. See CE declaration of conformity
6. The heat circulating pump and the heat pump controller must always be ready for operation.

Anhang / Appendix / Annexes

1 Maßbilder / Dimensioned drawings / Schémas cotés ..... A-II

1.1 Maßbild / Dimensioned drawing / Schéma coté SI 50TE ..... A-II
1.2 Maßbild / Dimensioned drawing / Schéma coté SI 75TE ..... A-III
1.3 Maßbild / Dimensioned drawing / Schéma coté SI 100TE ..... A-IV
1.4 Maßbild / Dimensioned drawing / Schéma coté SI 130TE ..... A-V

2 Diagramme / Schematics / Diagrammes ..... A-VI

2.1 Kennlinien / Schematics / Courbes caractéristiques SI 50TE ..... A-VI
2.2 Kennlinien / Schematics / Courbes caractéristiques SI 75TE ..... A-VII
2.3 Kennlinien / Schematics / Courbes caractéristiques SI 100TE ..... A-VIII
2.4 Kennlinien / Schematics / Courbes caractéristiques SI 130TE ..... A-IX

3 Stromlaufpläne / Wiring diagrams / Schémas électriques ..... A-X

3.1 Steuerung / Control / Commande SI 50TE - SI 100TE ..... A-X
3.2 Last / Load / Charge SI 50TE - SI 100TE ..... A-XI
3.3 Anschlussplan / Terminal diagram / Schéma de branchement SI 50TE - SI 100TE ..... A-XII
3.4 Legende / Legend / Légende SI 50TE - SI 100TE ..... A-XIII
3.5 Steuerung / Control / Commande SI 130TE ..... A-XIV
3.6 Last / Load / Charge SI 130TE ..... A-XV
3.7 Anschlussplan / Terminal diagram / Schéma de branchement SI 130TE ..... A-XVI
3.8 Legende / Legend / Légende SI 130TE ..... A-XVII

4 Hydraulisches Prinzipschema / Hydraulic block diagrams / Schéma hydraulique ..... A-XVIII

4.1 Darstellung / Schematic view / Représentation schématique ..... A-XVIII
4.2 Legende / Legend / Légende ..... A-XIX

5 Konformitätserklärung / Declaration of Conformity / Déclaration de conformité ..... A-XX

1 Maßbilder / Dimensioned drawings / Schémas cotés

1.1 Maßbild / Dimensioned drawing / Schéma coté SI 50TE

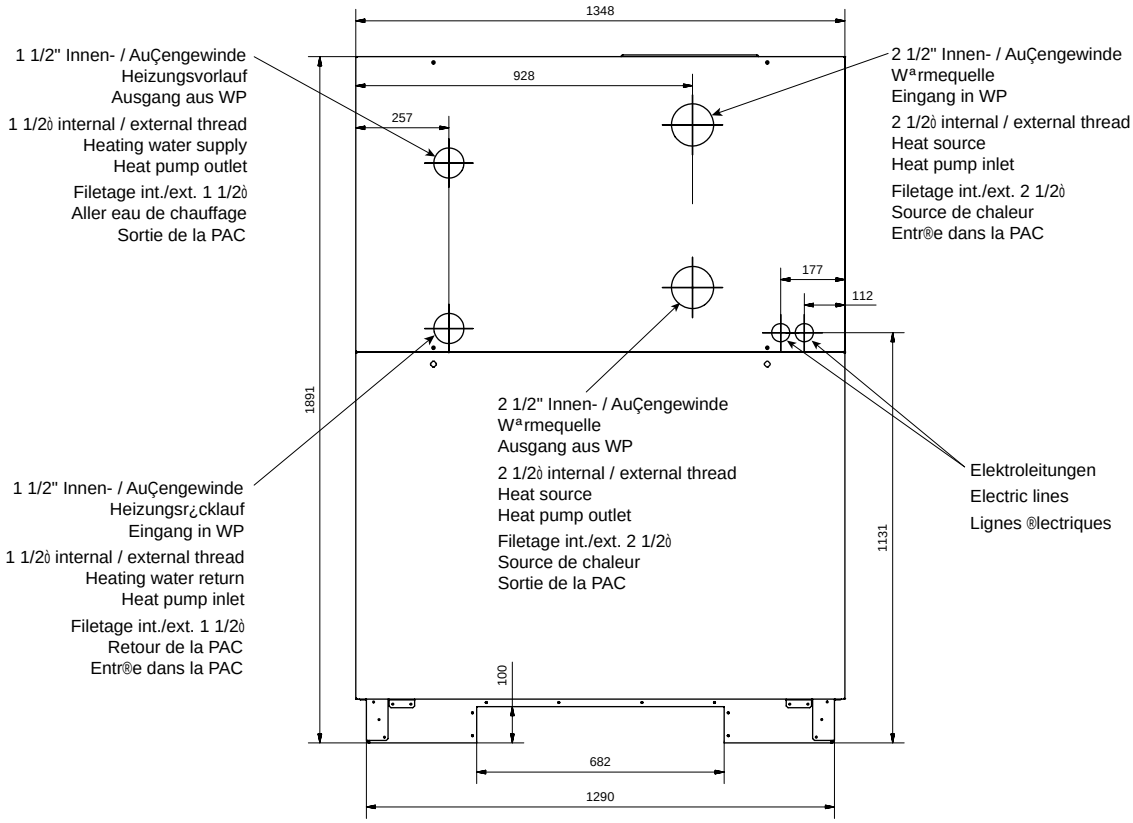

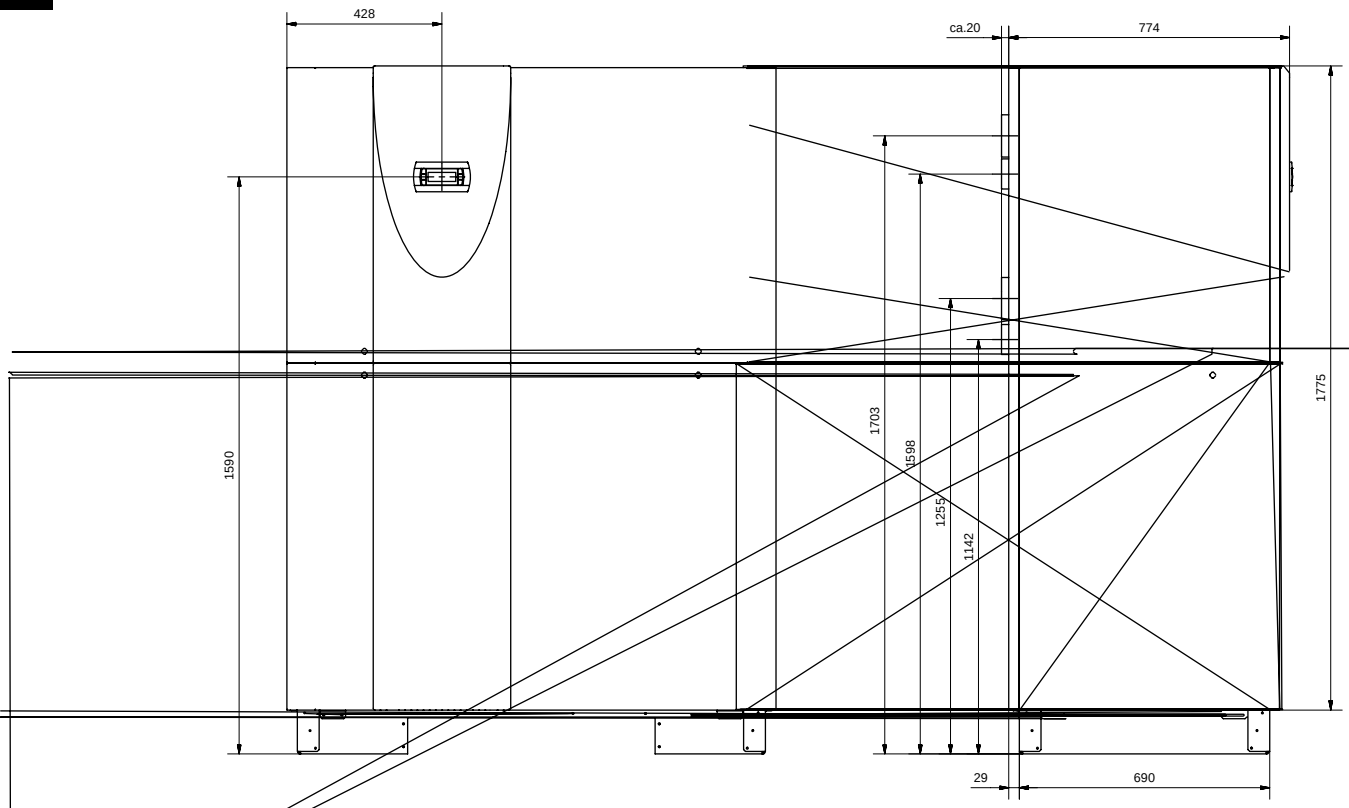

1.2 Maßbild / Dimensioned drawing / Schéma coté SI 75TE

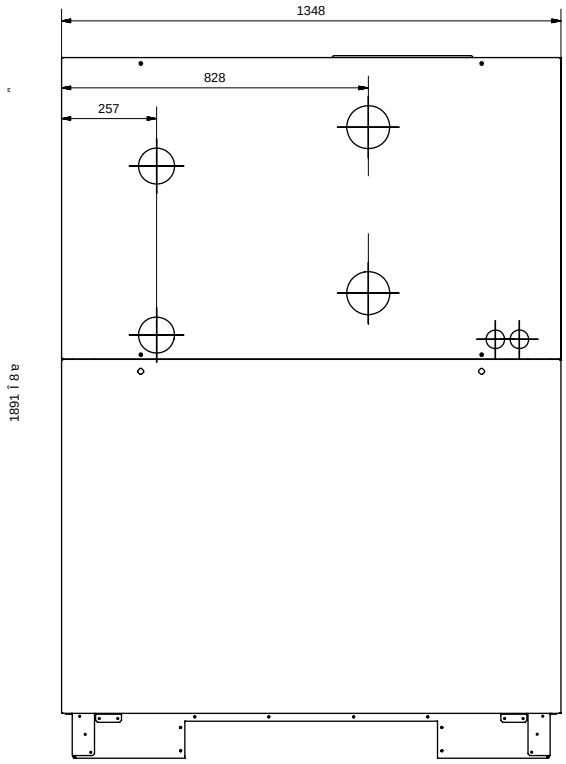

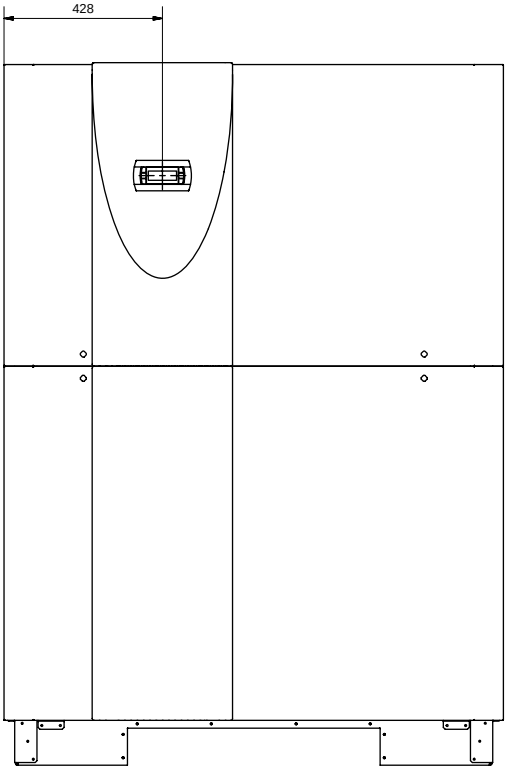

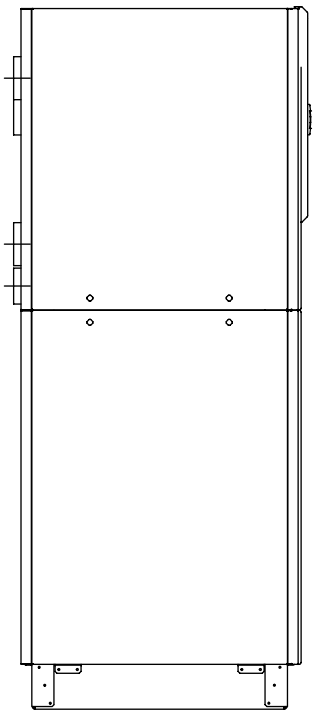

1.3 Maßbild / Dimensioned drawing / Schéma coté SI 100TE

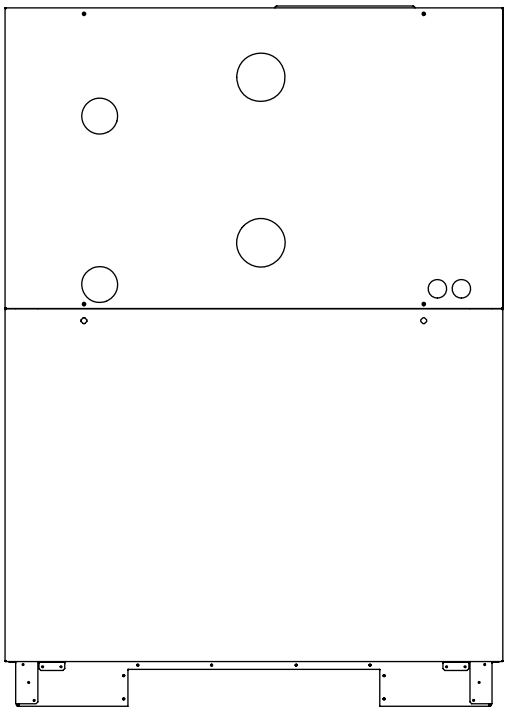

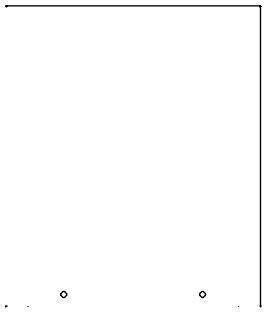

1.4 Maßbild / Dimensioned drawing / Schéma coté SI 130TE

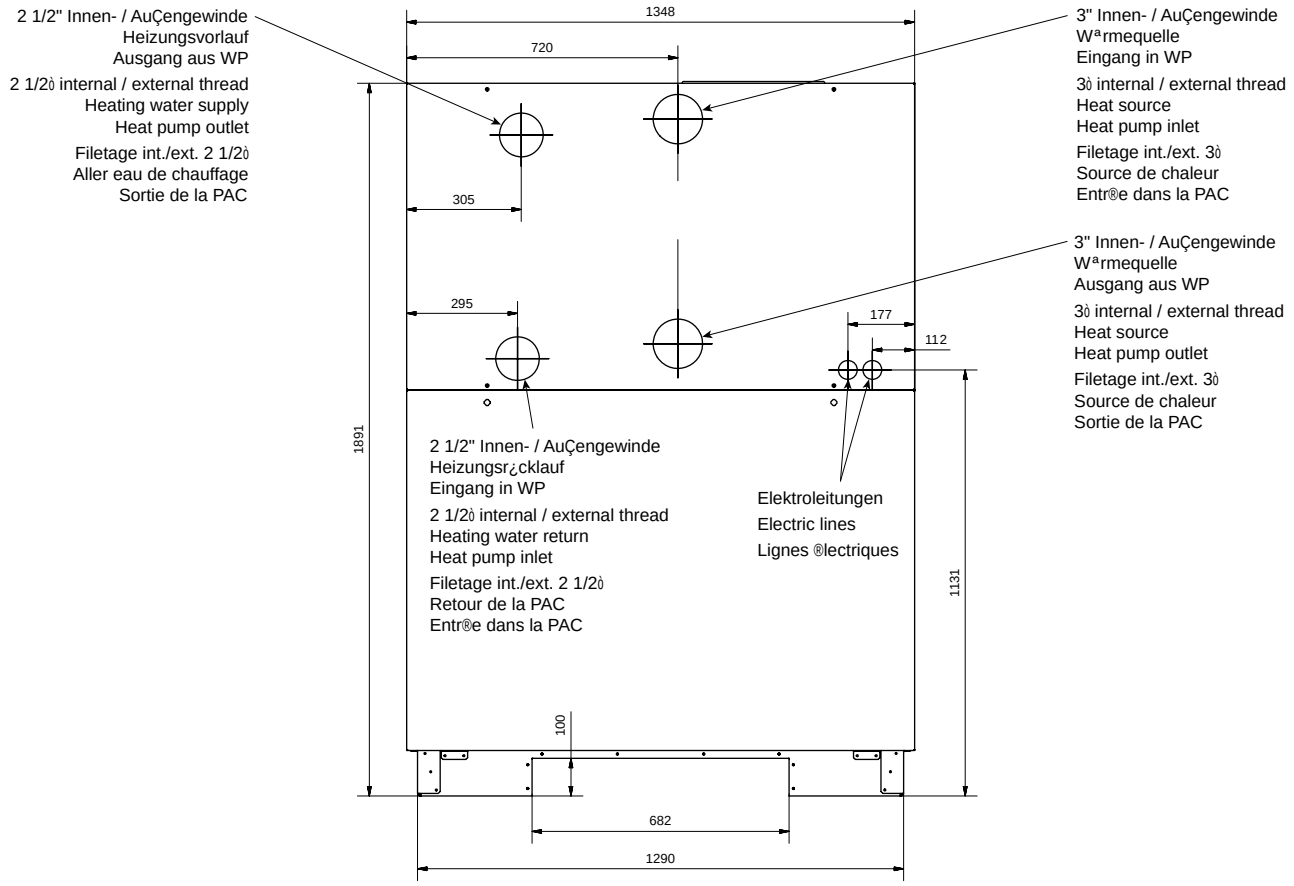

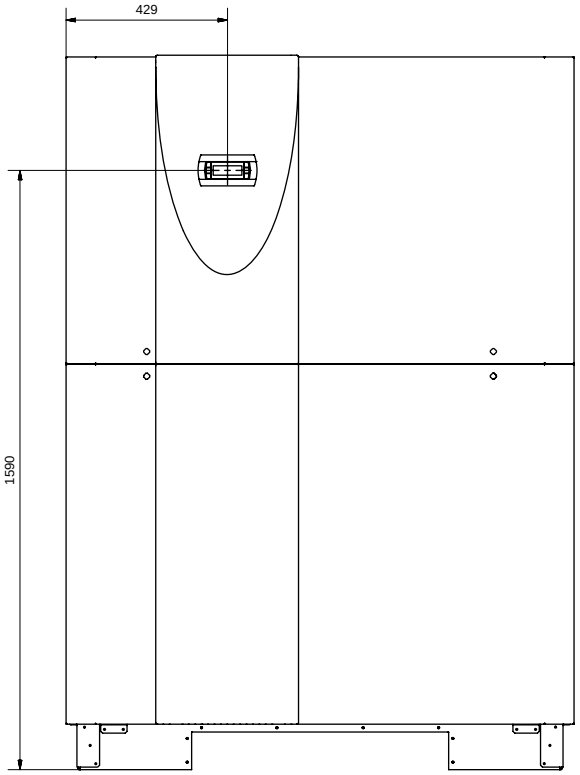

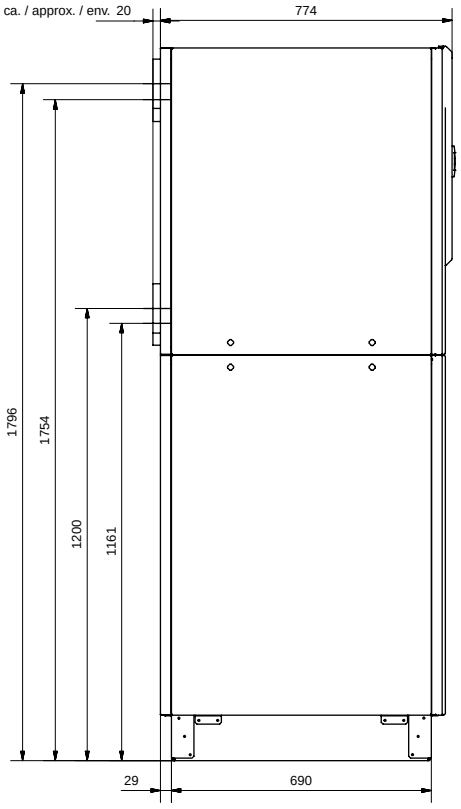

2 Diagramme / Schematics / Diagrammes

2.1 Kennlinien / Schematics / Courbes caractéristiques SI 50TE

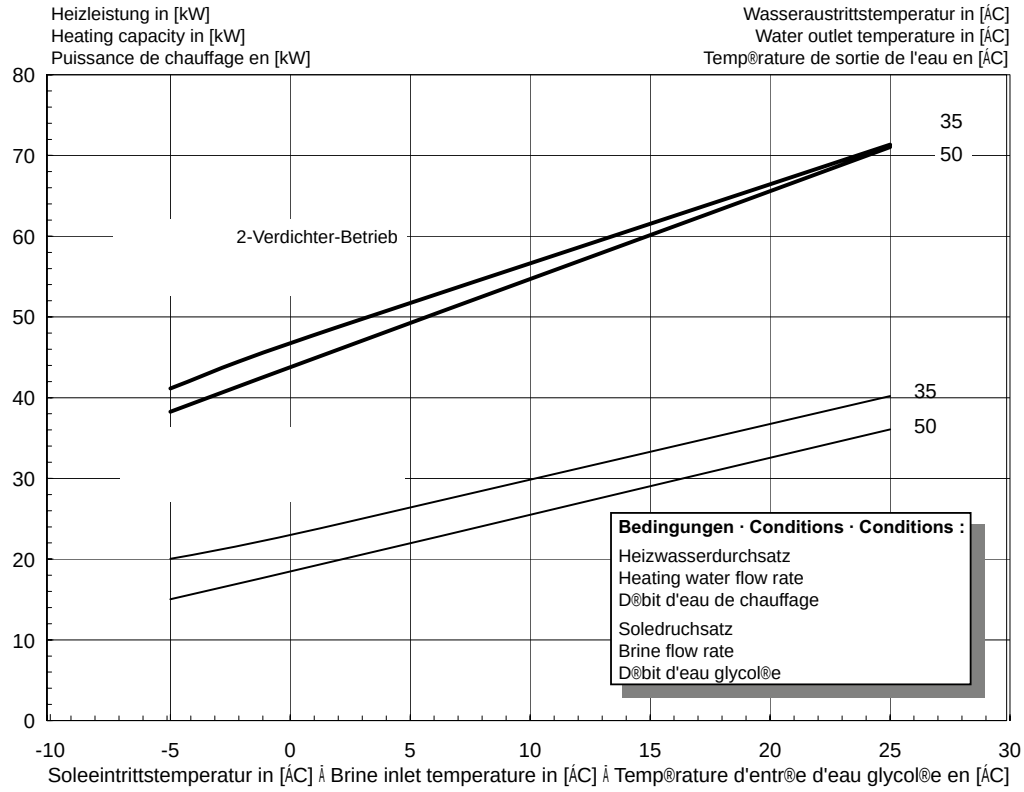

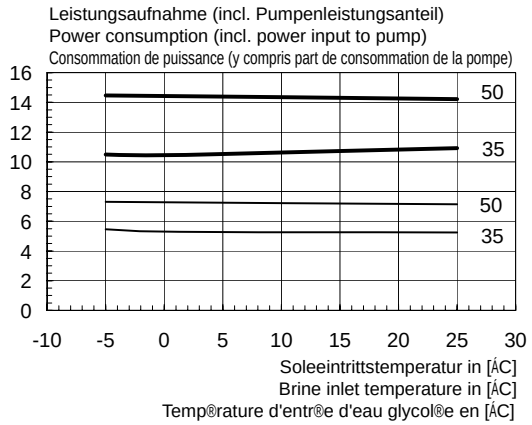

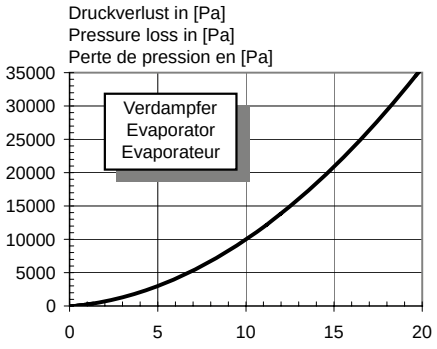

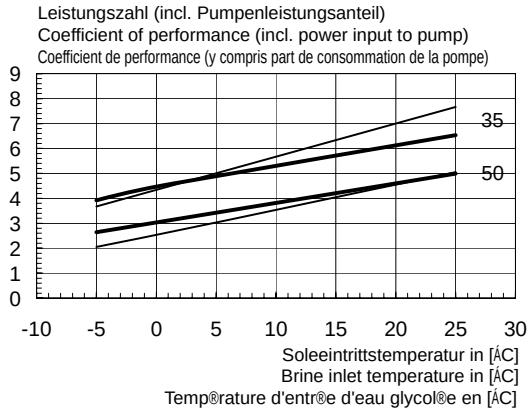

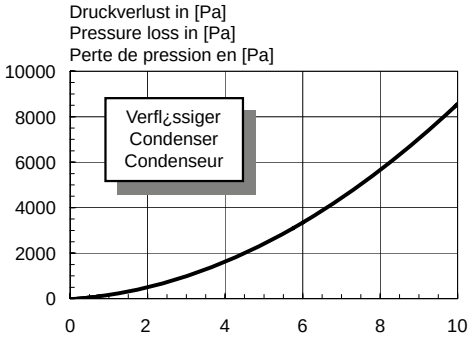

2.2 Kennlinien / Schematics / Courbes caractéristiques SI 75TE

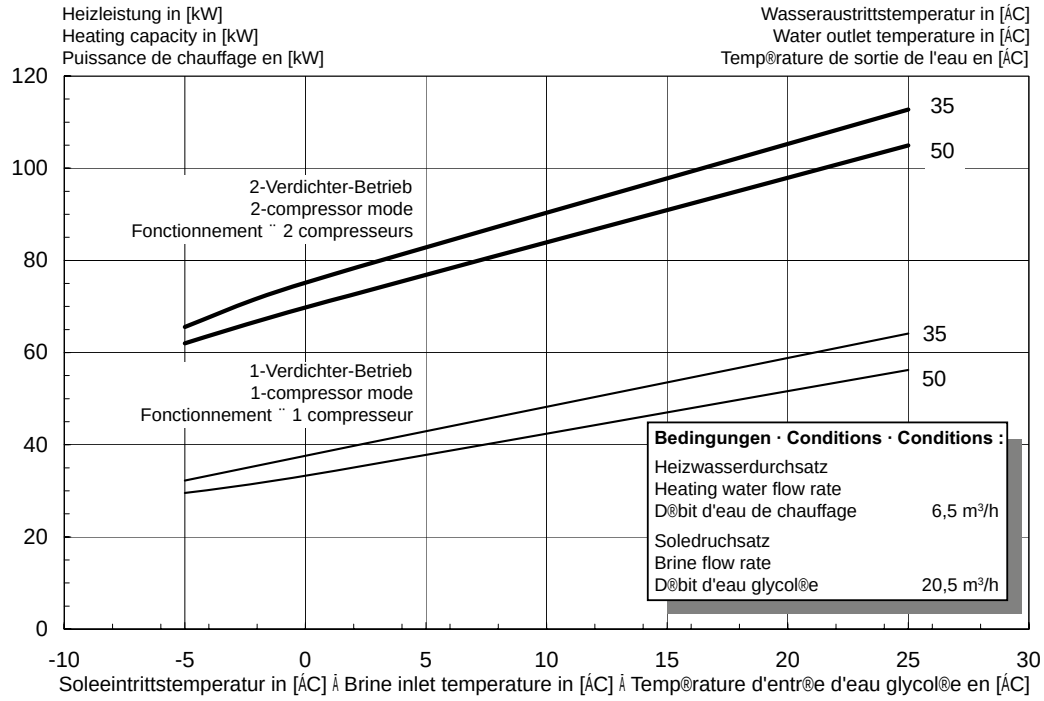

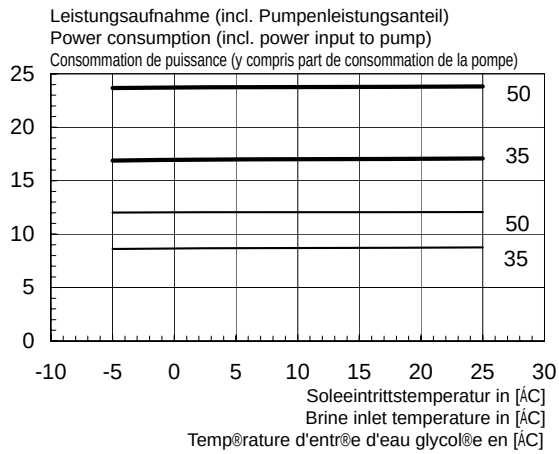

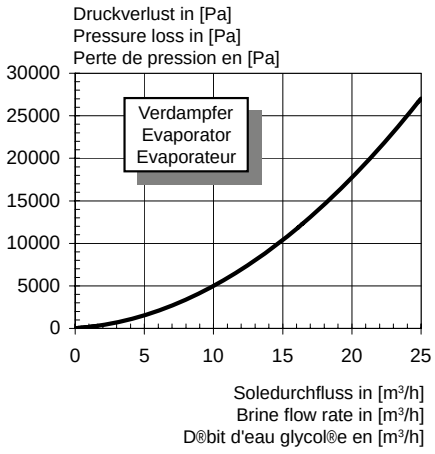

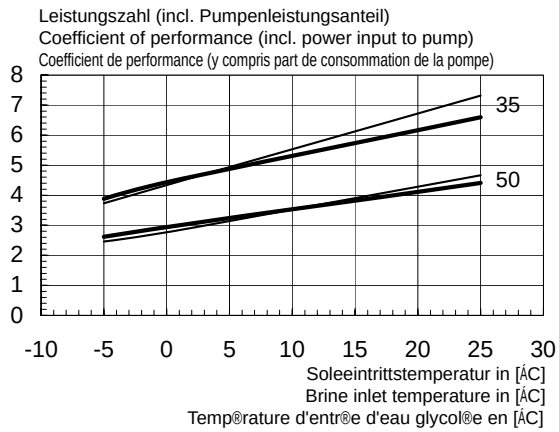

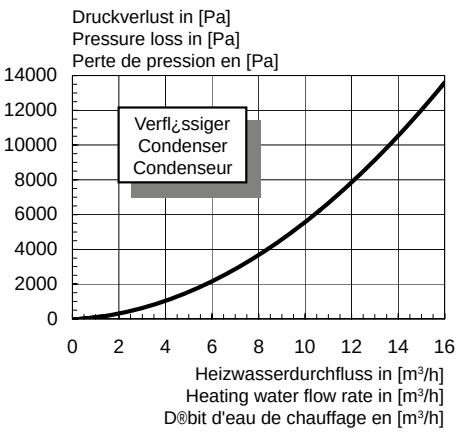

2.3 Kennlinien / Schematics / Courbes caractéristiques SI 100TE

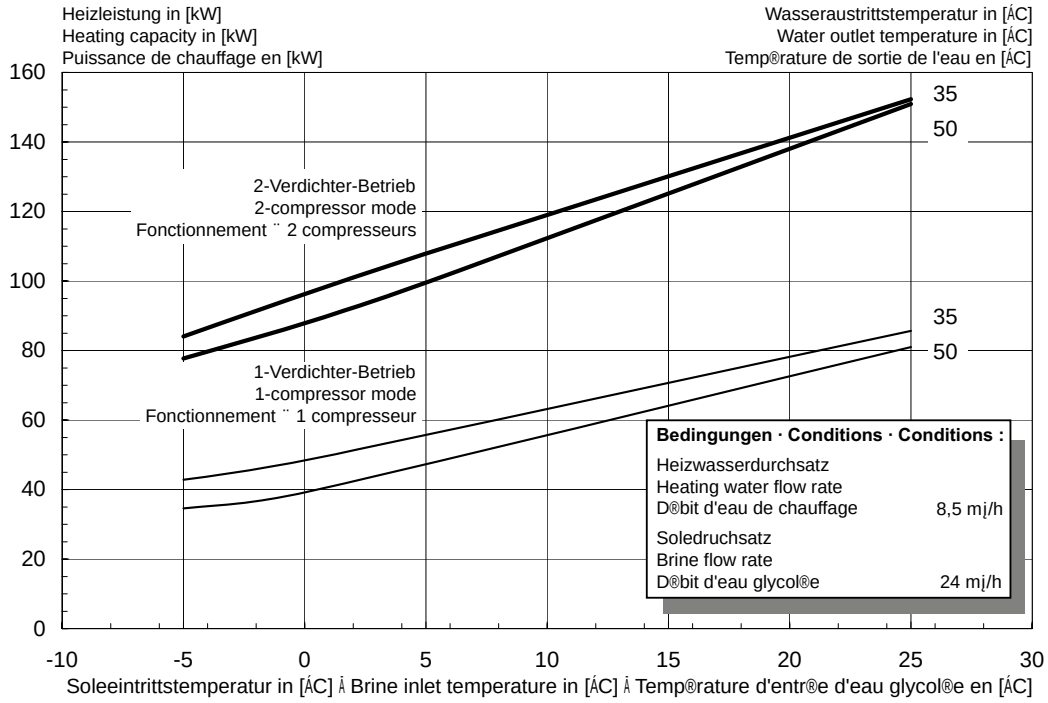

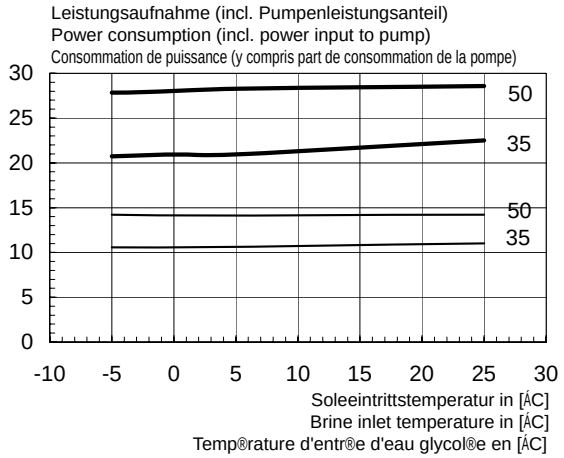

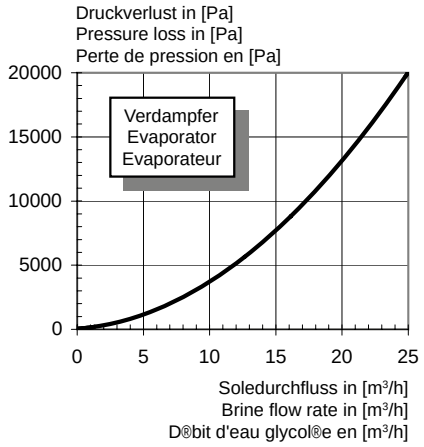

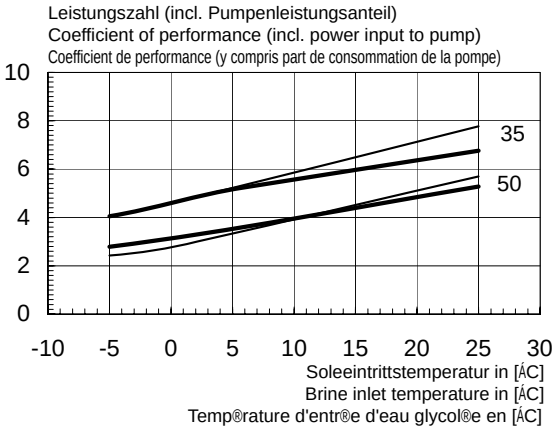

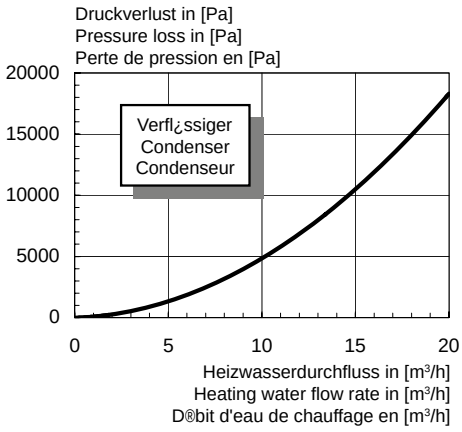

2.4 Kennlinien / Schematics / Courbes caractéristiques SI 130TE

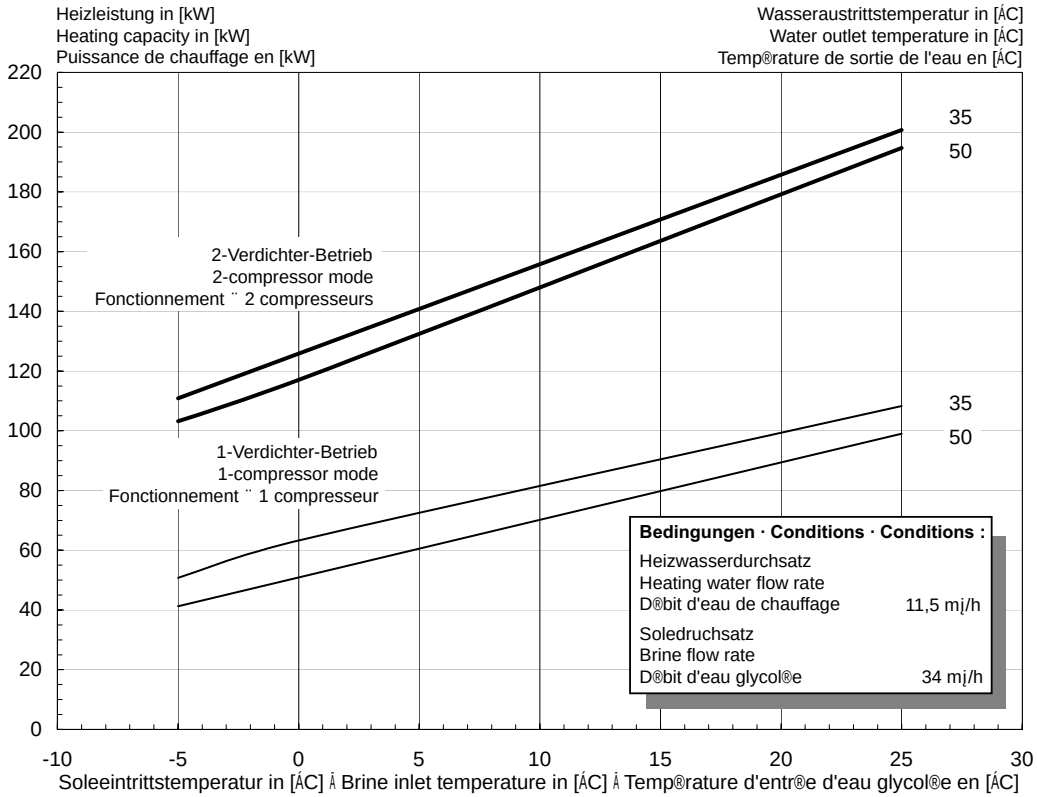

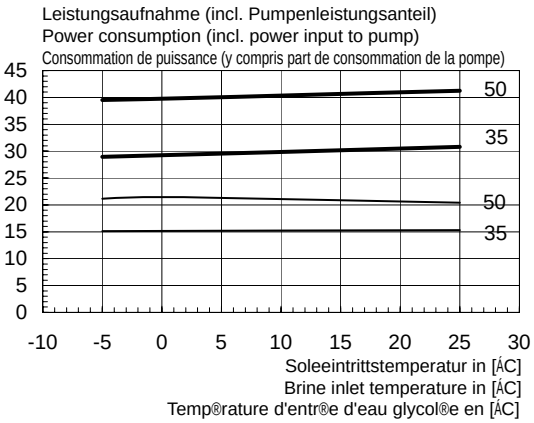

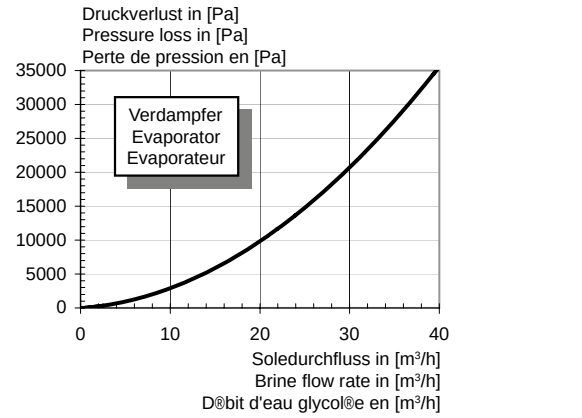

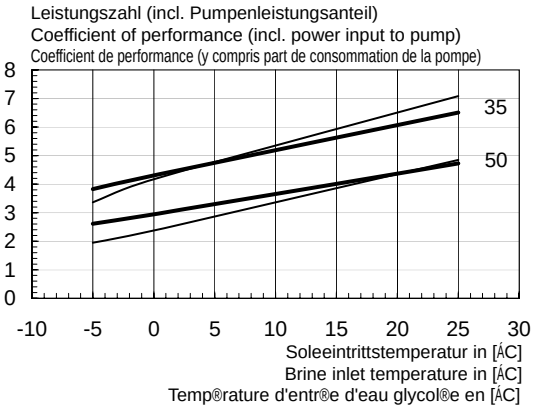

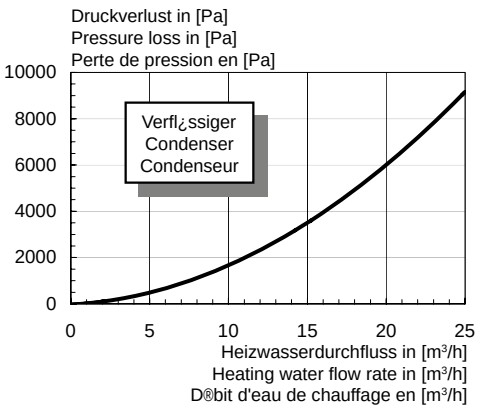

3 Stromlaufpläne / Wiring diagrams / Schémas électriques

3.1 Steuerung / Control / Commande SI 50TE - SI 100TE

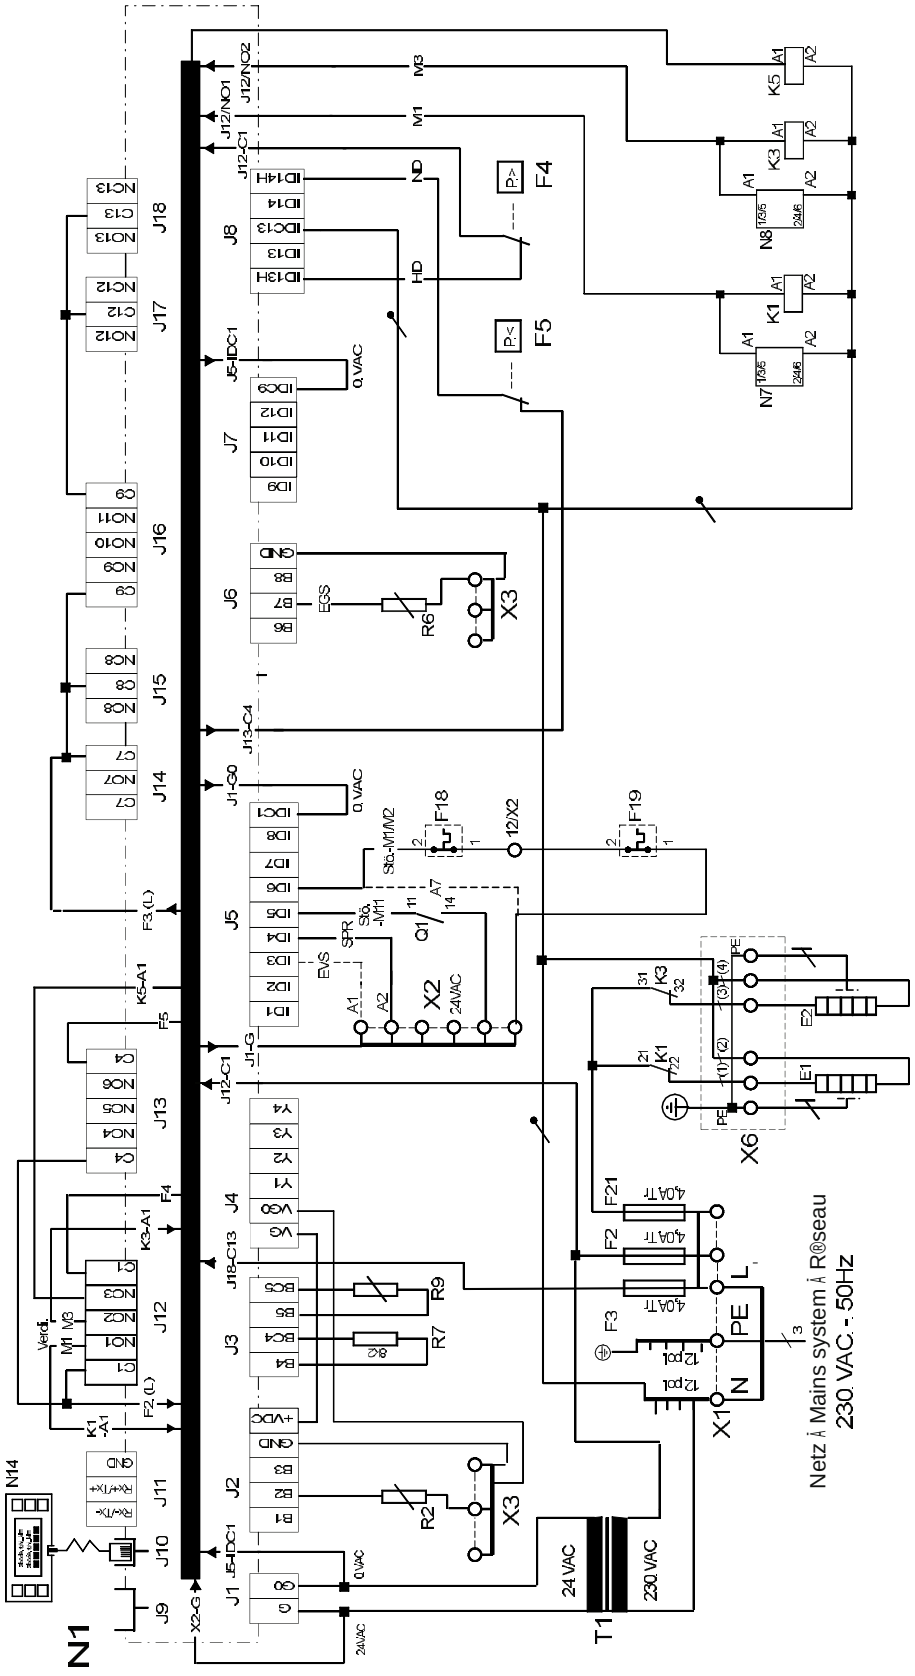

3.2 Last / Load / Charge SI 50TE - SI 100TE

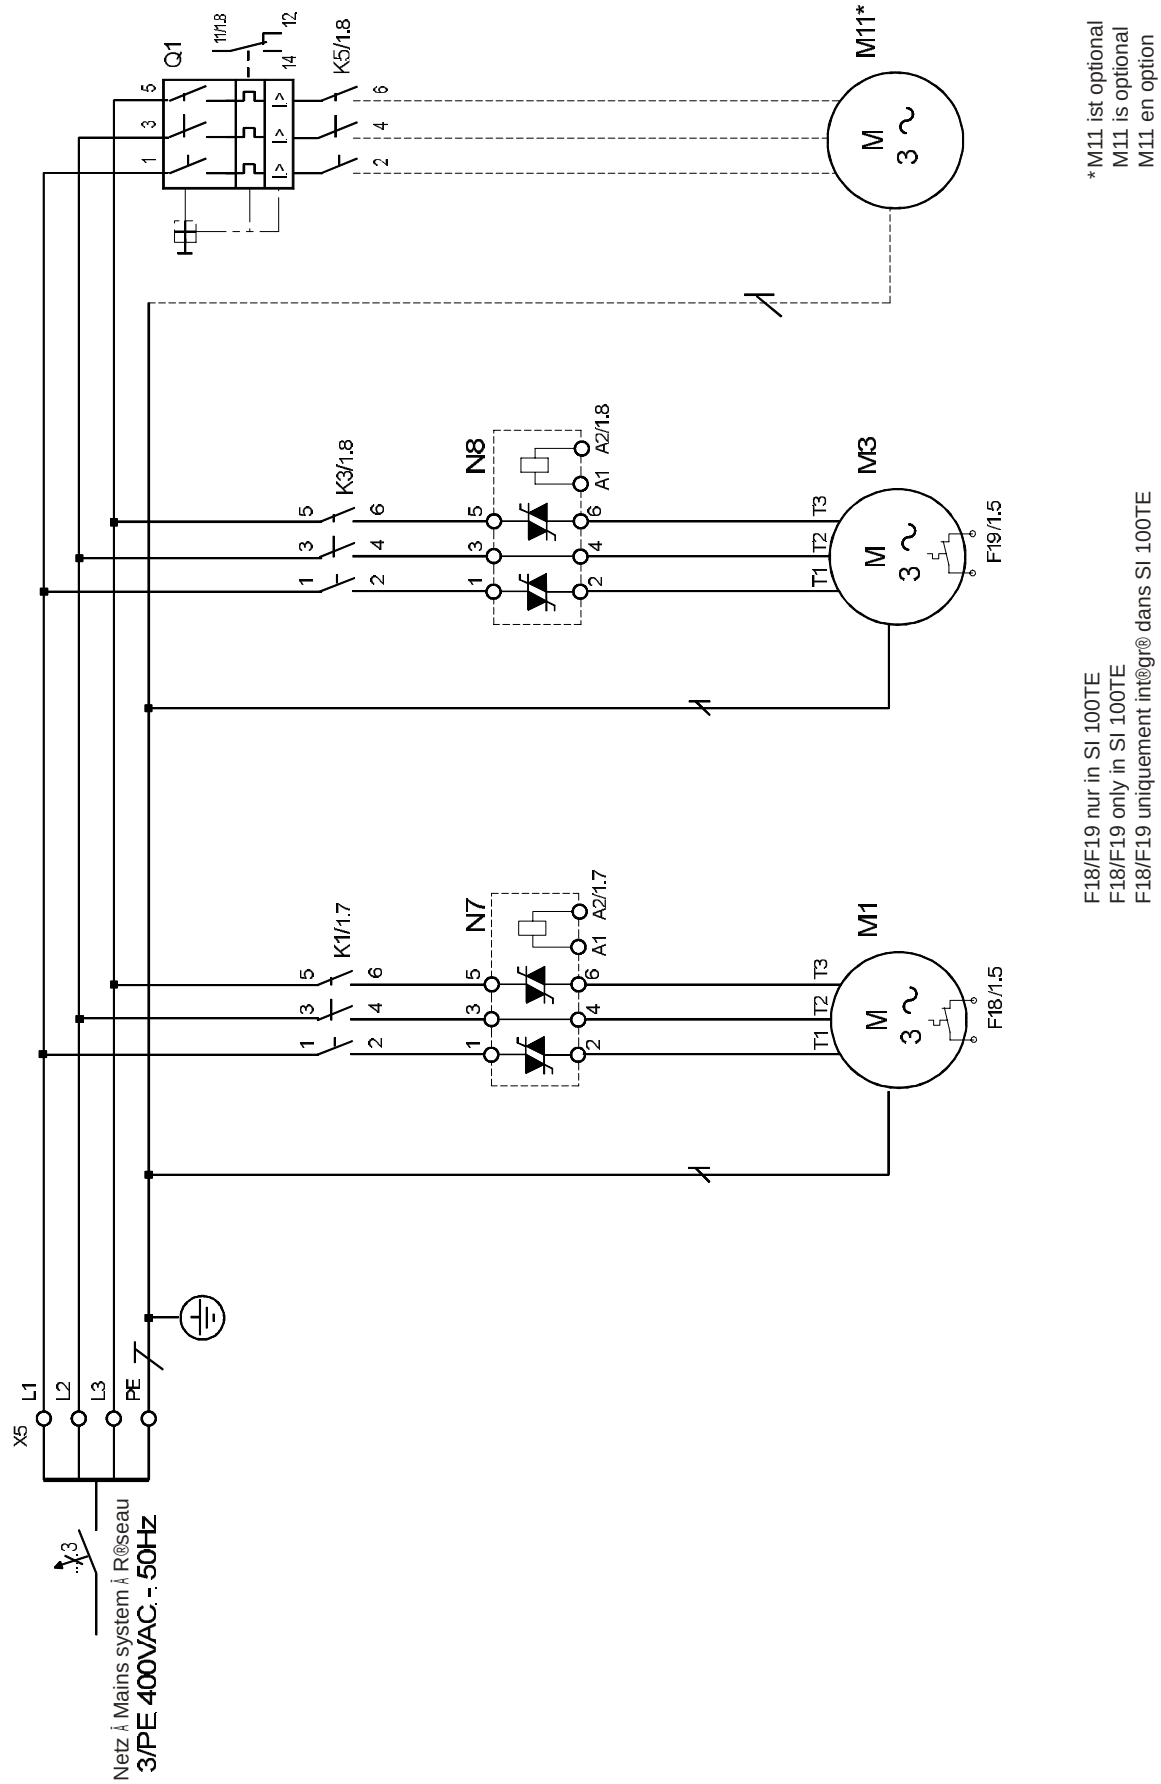

3.3 Anschlussplan / Terminal diagram / Schéma de branchement SI 50TE - SI 100TE

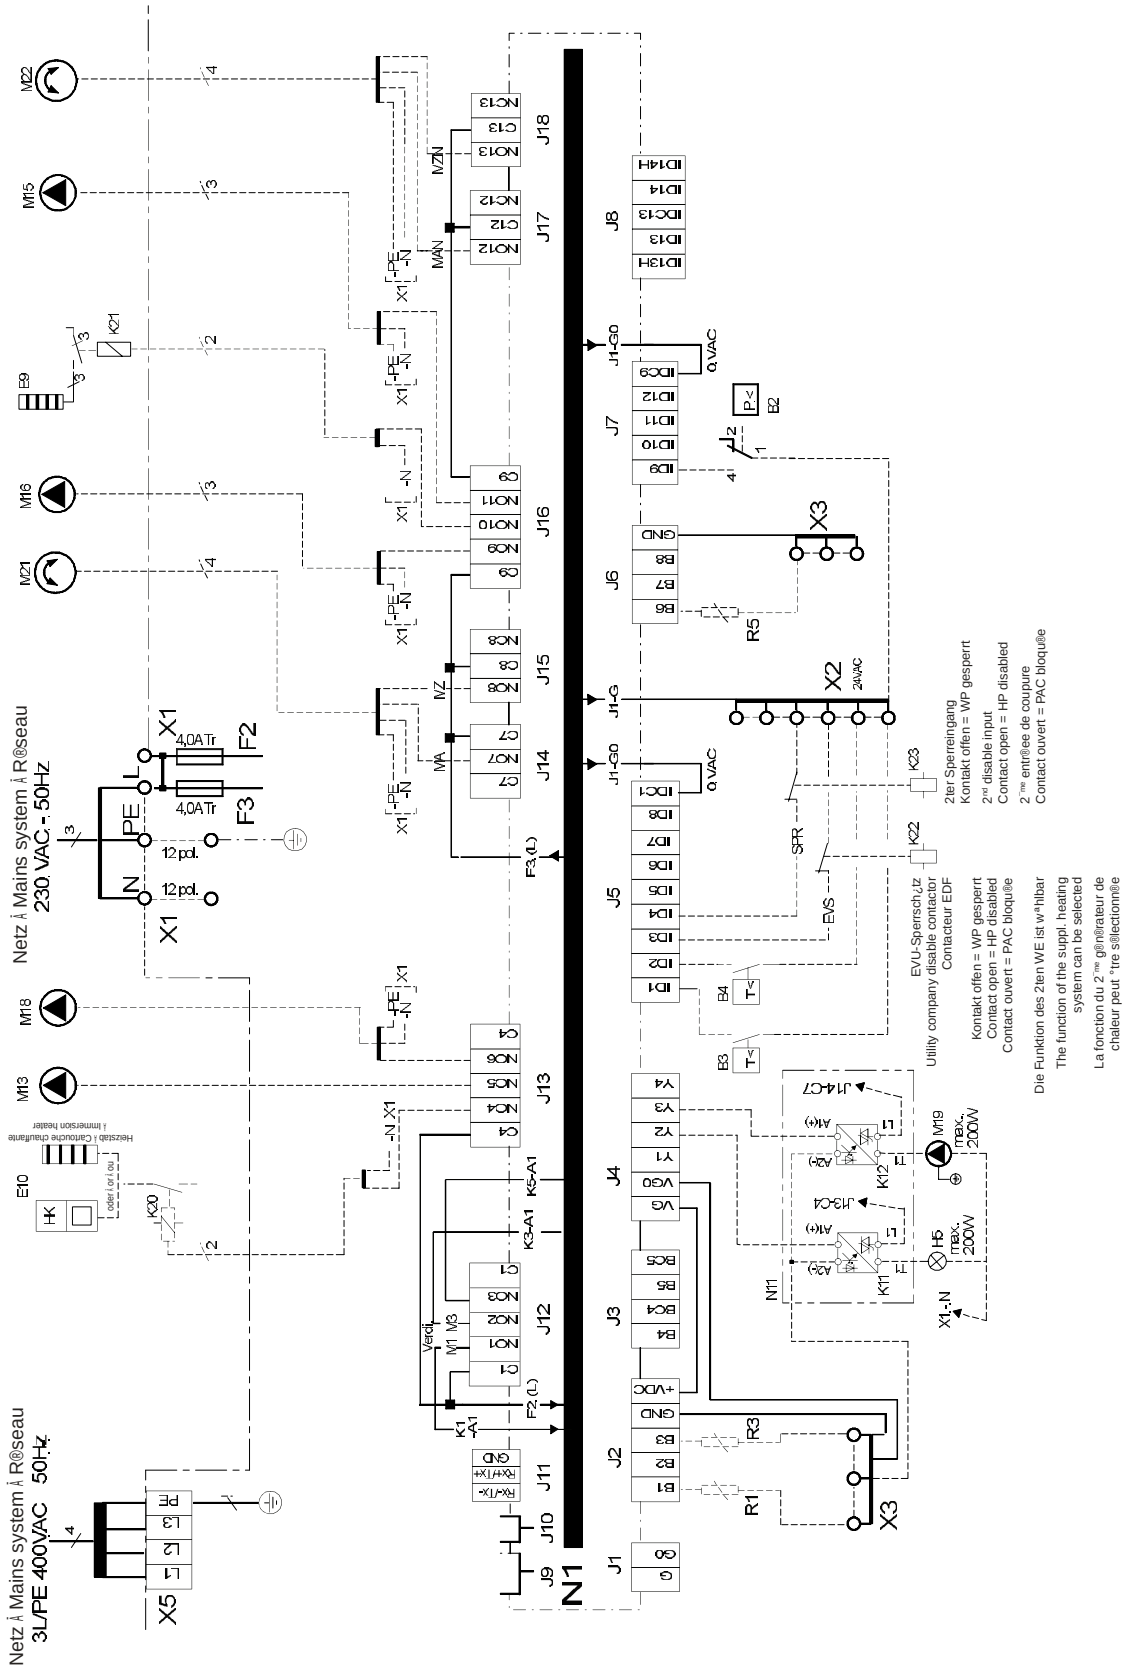

3.4 Legende / Legend / Légende SI 50TE - SI 100TE

A1	Drahtbrücke von J5-ID3>X2, muss eingelegt werden, wenn kein EVU-Sperrschütz gebraucht wird	Wire jumper across J5-ID3>X2 must be inserted if no utility company disable contactor is used	Le cavalier à fil de J5-ID3>X2, doit être inséré, si pas besoin d'un disjoncteur du fournisser d'électricité
A2	Drahtbrücke, muss bei Verwendung des 2. Sperreinganges entfernt werden	Wire jumper, must be removed if 2nd disable input is used	Retirer le cavalier à fil lors de l'*utilisation de la deuxième entrée de coupure
A7	Drahtbrücke in SI 50/-70, anstelle von F18/F19	Wire jumper in SI 50/-70, in place of F18/F19	Cavalier au niveau de SI 50/-70, au lieu de F18/F19
B2*	Pressostat Niederdruck-Sole	Pressostat low pressure, brine	Pressostat basse pression eau glycolée
B3*	Thermostat Warmwasser (alternativ zum Warmwasser-Fühler)	Thermostat, hot water (as an alternative to hot water sensor)	Thermostat eau chaude (alternative capteur eau chaude)
B4*	Thermostat Schwimmbadwasser	Thermostat, swimming pool water	Thermostat eau de piscine
E9*	Elekt.-Flanschheizkörper Warmwasser	Elect. flange heater for domestic hot water	Corps de chauffe à bride élect. eau chaude
E10*	2. Wärmeerzeuger (Heizkessel oder Elekt.-Tauchheizkörper)	Heat generator 2 (boiler or electric heating element)	2e générateur de chaleur (chaudière ou cartouche chauffante électr.)
F2	Lastsicherung für N1-Relaisausgänge an J12 und J13 4,0 ATr	Load fuse for N1 relay outputs across J12 and J13 4,0 A slow-acting	Coupe-circuit de la charge pour sorties de relais en J12 et J13 4,0 ATr
F3	Lastsicherung für N1-Relaisausgänge an J15 bis J18 4,0 ATr	Load fuse for N1 relay outputs across J15 to J18 4,0 A slow-acting	Coupe-circuit de la charge pour sorties de relais en J15 jusqu'à J18 4,0 ATr
F4	Pressostat Hochdruck	Pressostat, high pressure	Pressostat haute pression
F5	Pressostat Niederdruck	Pressostat, low pressure	Pressostat basse pression
H5*	Leuchte Störfernanzeige	Lamp, remote fault indicator	Lampe témion télédétection des pannes
J1...J18	Klemmensteckverbinder an N1	Terminal connector at N1	Connecteur à fiches pour borne de connexion en N1
K1	Schütz Verdichter 1	Contactor, compressor 1	Contacteur compresseur 1
K3	Schütz Verdichter 2	Contactor, compressor 2	Contacteur compresseur 2
K5	Schütz Solepumpe	Contactor, brine pump	Contacteur pompe d'eau glycolée
K11*	Elektron. Relais Störfernanzeige (Relaisbaugruppe)	Electron. relay for remote fault indicator (relay module)	Relais électronique pour télédétection de pannes (sur boîtier de relais)
K12*	Elektron. Relais Schwimmbadwasserumwälzpumpe (Relaisbaugruppe)	Electron. relay for swimming pool water (relay module)	Relais électronique pour circulateur d'eau de piscine (sur boîtier de relais)
K20*	Schütz 2. Wärmeerzeuger (Heizkessel oder Elekt.-Tauchheizkörper)	Contactor for heat generator 2 (boiler or electric heating element)	Contacteur 2e générateur de chaleur (chaudière ou cartouche chauffante électr.)
K21*	Schütz Elekt.-Flanschheizkörper für Warmwasser	Contactor for elect. flange heater for domestic hot water	Contacteur corps de chauffe à bride élect. eau chaude
K22*	EVU-Sperrschütz	Utility company disable contactor	Contacteur EDF
K23*	SPR-Hilfsschütz	SPR auxiliary contactor	Relais auxiliaire „SPR"
M1	Verdichter 1	Compressor 1	Compresseur 1
M3	Verdichter 2	Compressor 2	Compresseur 2
M11*	Primärpumpe	Primary pump	Pompe primaire
M13*	Heizungsumwälzpumpe	Heating circulating pump	Circulateur de chauffage
M15*	Heizungsumwälzpumpe 2. Heizkreis	Heating circulating pump for heating circuit 2	Circulateur de chauffage 2ème circuit de chauffage
M16*	Zusatzumwälzpumpe	Suppl. circulating pump	Circulateur d'appoint
M18*	Warmwasserumwälzpumpe	Hot water circulating pump	Circulateur d'eau chaude
M19*	Schwimmbadwasserumwälzpumpe	Swimming pool circulating pump	Circulateur d'eau de piscine
M21*	Mischer Hauptkreis	Mixer, principal circuit	Mélangeur circuit principal
M22*	Mischer 2. Heizkreis	Mixer, heating circuit 2	Mélangeur 2ème circuit de chauffage
N1	Wärmepumpenregler	Heat pump controller	Régulateur de pompe à chaleur
N7	Anlaufstrombegrenzung Verd. 1	Starting current limiter, compr. 1	Limiteur du courant de démarrage compresseur 1
N8	Anlaufstrombegrenzung Verd. 2	Starting current limiter, compr. 2	Limiteur du courant de démarrage compresseur 2
N11*	Relaisbaugruppe	Relay module	Boîtier de relais
N14	Bedienteil	Operating element	Commande
Q1	Motorschutz M11	Motor protection feature M11	Protection moteur M11
R1	Außenfühler	External sensor	Sonde extérieur
R2	Rücklauffühler	Return sensor	Sonde retour chauffage
R3*	Warmwasserfühler (alternativ zum Warmwasserthermostat)	Hot water sensor (as an alternative to hot water thermostat)	Sonde eau chaude (alternative au thermostat eau chaude)
R5*	Fühler für 2. Heizkreis	Sensor for heating circuit 2	Sonde pour 2ème circuit de chauffage
R6	Eingefrierschutzfühler	Freeze protection sensor	Sonde antigel
R7	Kodierwiderstand 8k	Coding resistor 8k	Résistance avec code des couleurs 8,2 kOhm
R9	Vorlauffühler	Flow sensor	Sonde aller
T1	Sicherheitstrenntransformator 230/24 VAC-28VA	Safety isolating transformer 230/24 VAC-28VA	Transformateur de coupure de sécurité 230/24 VAC-28VA
X1	Klemmenleiste Netz-Steuerung L/N/PE-230VAC-50Hz/Sicherungen/N- und PE-Verteiler	Terminal strip mains control L/N/PE-230VAC-50Hz/ fuses/N and PE-terminal block	Bornier secteur commande L/N/PE-230VAC-50Hz/ fusibles/distributeur Net PE
X2	Klemmenleiste 24 VAC-Verteiler	Terminal strip 24 VAC-terminal block	Bornier 24 VAC - répartiteur
X3	Klemmenleiste GND-Verteiler für Sensoren R1/-2 und -3 an J2 und R5 u. -6 an J6	Terminal strip GND terminal block for sensors R1/-2 and -3 at J2 and R5 and -6 at J6	Bornier GND - répartiteur pour sondes R1/-2 et 3 sur J2 et R5 et -6 sur J6
X5	Klemmenleiste Leistungseinspeisung 3L/PE-400VAC-50 Hz	Terminal strip power supply 3L/PE-400VAC-50 Hz	Bornier alimentation en puissance 3L/PE-400VAC-50 Hz
	Abkürzungen	**Abbreviations:**	**Abréviations :**
EVS	EVU-Sperreingang	Utility company disable input	Entrée de coupure courant du fournisser de courant
SPR	Zusätzlicher Sperreingang	Supplementary disable input	Entrée de coupure complémentaire
MA	Mischer AUF	Mixer OPEN	Mélangeur OUVERT
MZ	Mischer ZU	Mixer CLOSED	Mélangeur FERME
*	Bauteile sind bauseits beizustellen, bzw. als Zubehör erhältlich	Components to be supplied by the customer, available as accessories	Pièces fournies par le client (disponibles comme accessoires)

3.5 Steuerung / Control / Commande SI 130TE

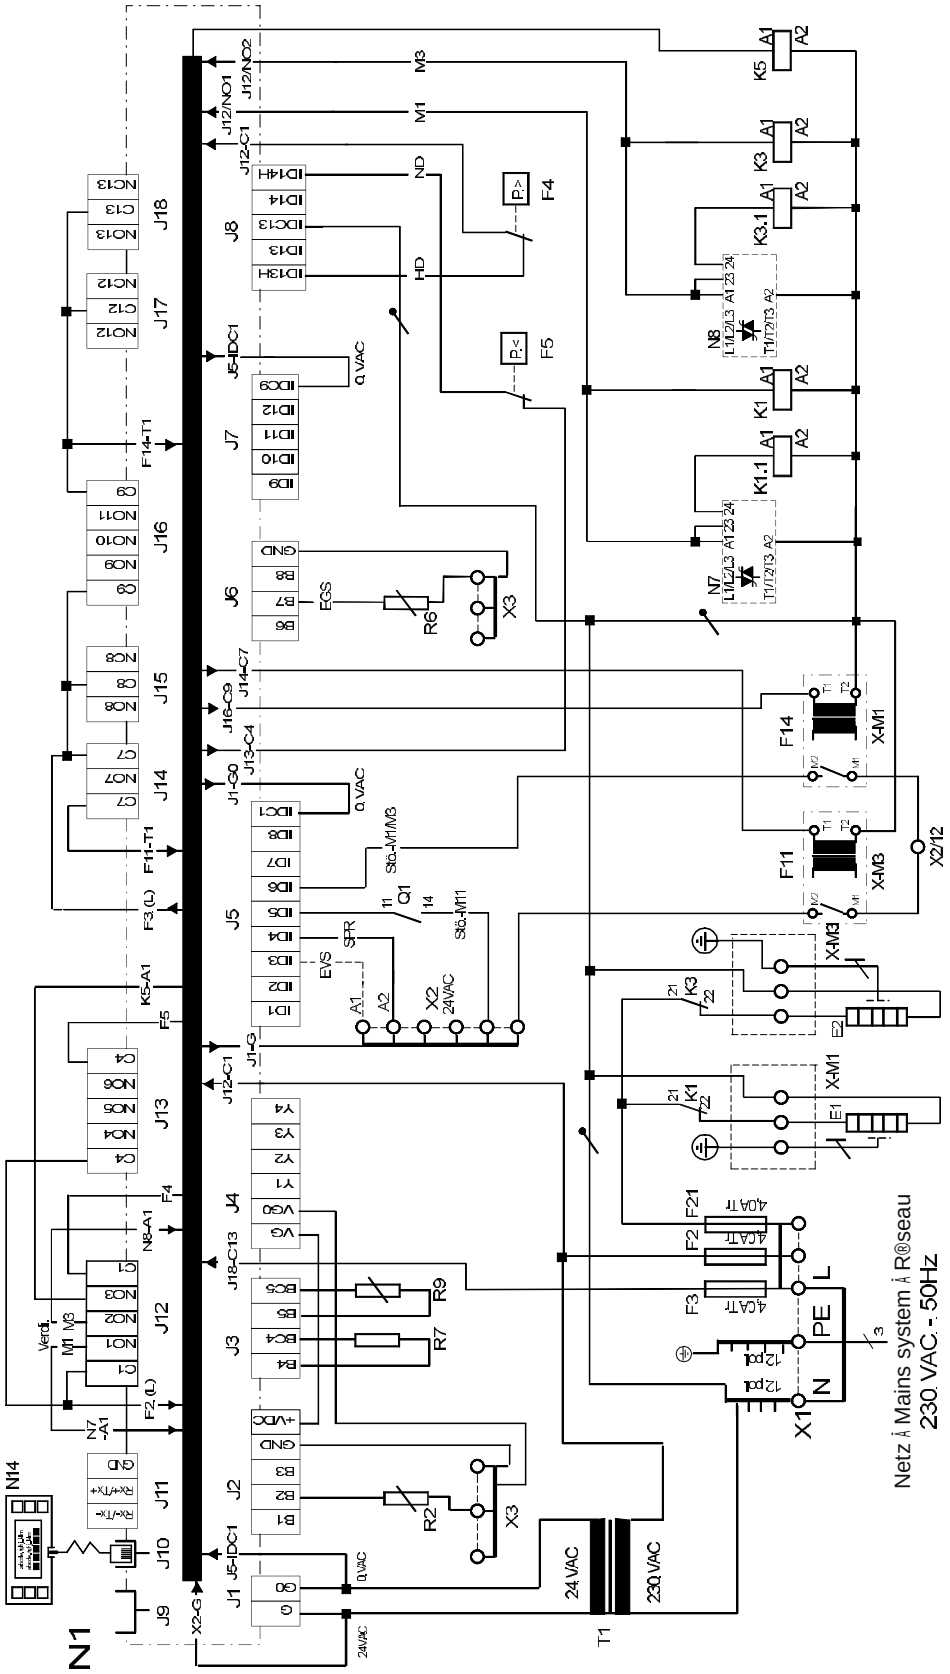

3.6 Last / Load / Charge SI 130TE

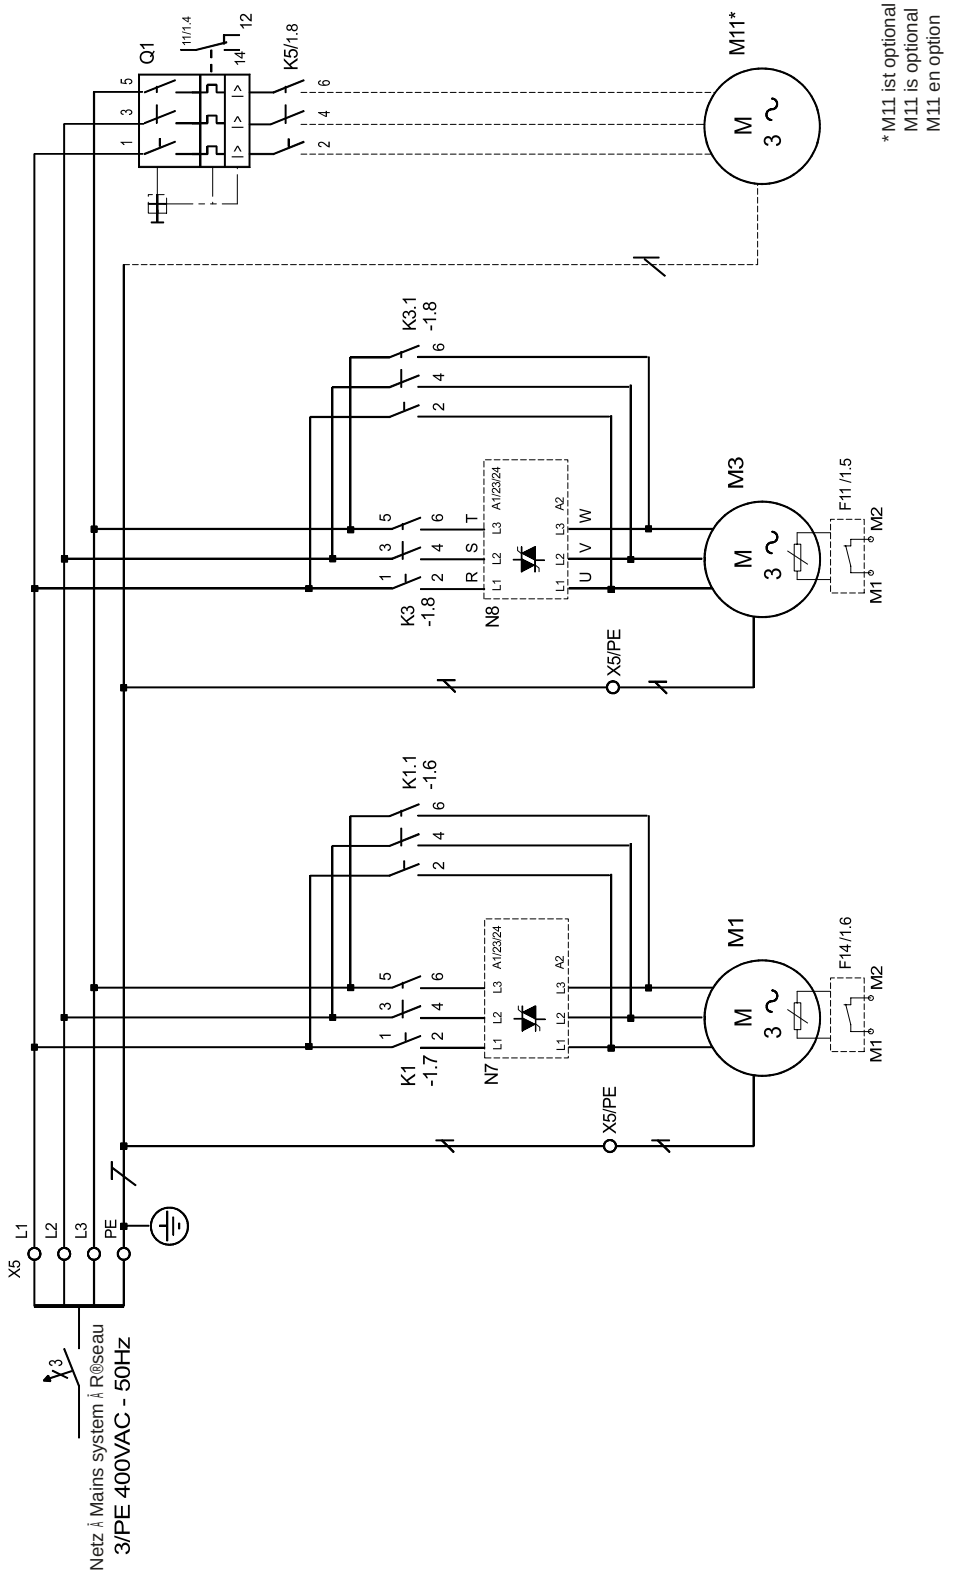

3.7 Anschlussplan / Terminal diagram / Schéma de branchement SI 130TE

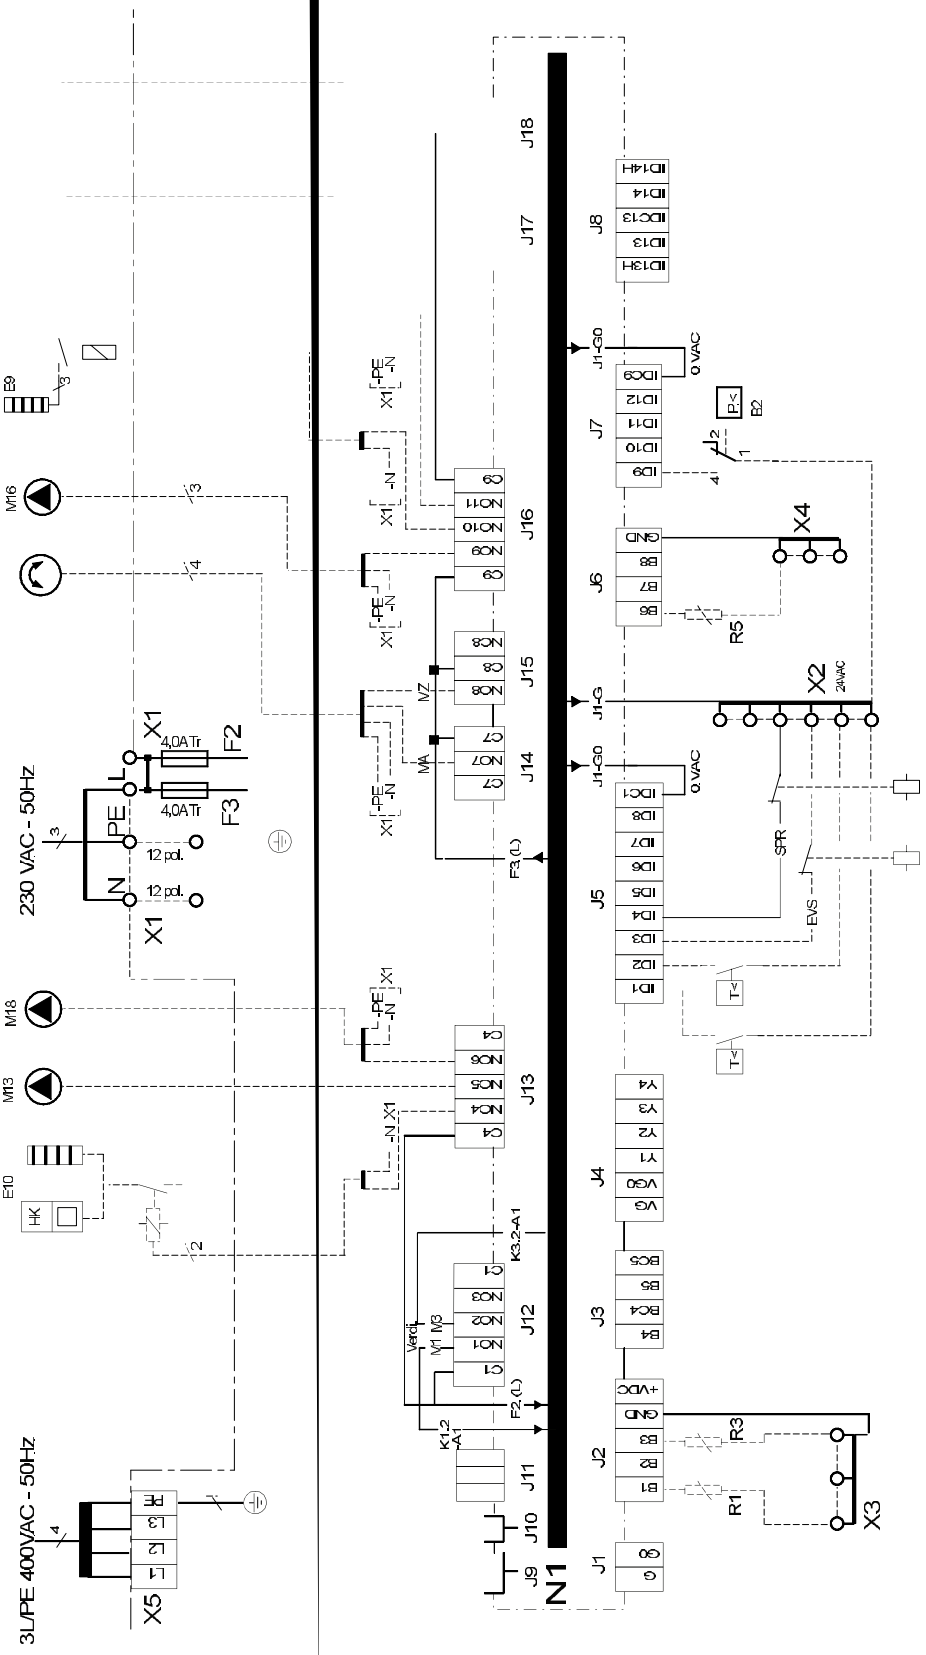

3.8 Legende / Legend / Légende SI 130TE

A1	Drahtbrücke von J5-ID3>X2, muss eingelegt werden, wenn kein EVU-Sperrschütz gebraucht wird	Wire jumper across J5-ID3>X2 must be inserted if no utility company disable contactor is used	Le cavalier à fil de J5-ID3>X2, doit être inséré, si pas besoin d'un disjoncteur du fournisser d'électricité
A2	Drahtbrücke, muss bei Verwendung des 2. Sperreinganges entfernt werden	Wire jumper, must be removed if 2nd disable input is used	Retirer le cavalier à fil lors de l'*utilisation de la deuxième entrée de coupure
B2*	Pressostat Niederdruck-Sole	Pressostat low pressure, brine	Pressostat basse pression eau glycolée
B3*	Thermostat Warmwasser (alternativ zum Warmwasser-Fühler)	Thermostat, hot water (as an alternative to hot water sensor)	Thermostat eau chaude (alternative capteur eau chaude)
B4*	Thermostat Schwimmbadwasser	Thermostat, swimming pool water	Thermostat eau de piscine
E1	Ölsumpfheizung Verdichter 1	Oil sump heater, compressor 1	Chauffage carter à huile compresseur 1
E2	Ölsumpfheizung Verdichter 2	Oil sump heater, compressor 2	Chauffage carter à huile compresseur 2
E9*	Elekt.-Flanschheizkörper Warmwasser	Elect. flange heater for domestic hot water	Corps de chauffe à bride élect. eau chaude
E10*	2. Wärmeerzeuger (Heizkessel oder Elekt.-Tauchheizkörper)	Heat generator 2 (boiler or electric heating element)	2e générateur de chaleur (chaudière ou cartouche chauffante électr.)
F2	Lastsicherung für N1-Relaisausgänge an J12 und J13 4,0 ATr	Load fuse for N1 relay outputs across J12 and J13 4,0 A slow-acting	Coupe-circuit de la charge pour sorties de relais en J12 et J13 4,0 ATr
F3	Lastsicherung für N1-Relaisausgänge an J15 bis J18 4,0 ATr	Load fuse for N1 relay outputs across J15 to J18 4,0 A slow-acting	Coupe-circuit de la charge pour sorties de relais en J15 jusqu'à J18 4,0 ATr
F4	Pressostat Hochdruck	Pressostat, high pressure	Pressostat haute pression
F5	Pressostat Niederdruck	Pressostat, low pressure	Pressostat basse pression
H5*	Leuchte Störfernanzeige	Lamp, remote fault indicator	Lampe témion télédétection des pannes
J1...J18	Klemmensteckverbinder an N1	Terminal connector at N1	Connecteur à fiches pour borne de connexion en N1
K1	Schütz Verdichter 1	Contactor, compressor 1	Contacteur compresseur 1
K1.1	Schütz Überbrückung N7	Contactor, bypass N7	Contacteur pontage N7
K3	Schütz Verdichter 2	Contactor, compressor 2	Contacteur compresseur 2
K3.1	Schütz Überbrückung N8	Contactor, bypass N8	Contacteur pontage N8
K5	Schütz Soleumwälzpumpe	Contactor, brine circulating pump	Contacteur pompe d'eau glycolée
K11*	Elektron. Relais Störfernanzeige (Relaisbaugruppe)	Electron. relay for remote fault indicator (relay module)	Relais électronique pour télédétection de pannes (sur boîtier de relais)
K12*	Elektron. Relais Schwimmbadwasserumwälzpumpe (Relaisbaugruppe)	Electron. relay for swimming pool water (relay module)	Relais électronique pour circulateur d'eau de piscine (sur boîtier de relais)
K20*	Schütz 2. Wärmeerzeuger (Heizkessel oder Elekt.-Tauchheizkörper)	Contactor for heat generator 2 (boiler or electric heating element)	Contacteur 2e générateur de chaleur (chaudière ou cartouche chauffante électr.)
K21*	Schütz Elekt.-Flanschheizkörper für Warmwasser	Contactor for elect. flange heater for domestic hot water	Contacteur corps de chauffe à bride élect. eau chaude
K22*	EVU-Sperrschütz	Utility company disable contactor	Contacteur EDF
K23*	SPR-Hilfsschütz	SPR auxiliary contactor	Relais auxiliaire „SPR"
M1	Verdichter 1	Compressor 1	Compresseur 1
M3	Verdichter 2	Compressor 2	Compresseur 2
M11*	Primärpumpe	Primary pump	Pompe primaire
M13*	Heizungsumwälzpumpe	Heating circulating pump	Circulateur de chauffage
M15*	Heizungsumwälzpumpe 2. Heizkreis	Heating circulating pump for heating circuit 2	Circulateur de chauffage 2ème circuit de chauffage
M16*	Zusatzumwälzpumpe	Suppl. circulating pump	Circulateur d'appoint
M18*	Warmwasserumwälzpumpe	Hot water circulating pump	Circulateur d'eau chaude
M19*	Schwimmbadwasserumwälzpumpe	Swimming pool circulating pump	Circulateur d'eau de piscine
M21*	Mischer Hauptkreis	Mixer, principal circuit	Mélangeur circuit principal
M22*	Mischer 2. Heizkreis	Mixer, heating circuit 2	Mélangeur 2ème circuit de chauffage
N1	Wärmepumpenregler	Heat pump controller	Régulateur de pompe à chaleur
N7	Anlaufstrombegrenzung Verd. 1	Starting current limiter, compr. 1	Limiteur du courant de démarrage compresseur 1
N8	Anlaufstrombegrenzung Verd. 2	Starting current limiter, compr. 2	Limiteur du courant de démarrage compresseur 2
N11*	Relaisbaugruppe	Relay module	Boîtier de relais
N14	Bedienteil	Operating element	Commande
Q1	Motorschutz M11	Motor protection feature M11	Protection moteur M11
R1	Außenfühler	External sensor	Sonde extérieur
R2	Rücklauffühler	Return sensor	Sonde retour chauffage
R3*	Warmwasserfühler (alternativ zum Warmwasserthermostat)	Hot water sensor (as an alternative to hot water thermostat)	Sonde eau chaude (alternative au thermostat eau chaude)
R5*	Fühler für 2. Heizkreis	Sensor for heating circuit 2	Sonde pour 2ème circuit de chauffage
R6	Eingefrierschutzfühler	Freeze protection sensor	Sonde antigel
R7	Kodierwiderstand 8k2	Coding resistor 8k2	Résistance avec code des couleurs 8,2 kOhm
R9	Vorlauffühler	Flow sensor	Sonde aller
T1	Sicherheitstrenntransformator 230/24 VAC-28VA	Safety isolating transformer 230/24 VAC-28VA	Transformateur de coupure de sécurité 230/24 VAC-28VA
X1	Klemmenleiste Netz-Steuerung L/N/PE-230VAC-50Hz/Sicherungen/N- und PE-Verteiler	Terminal strip mains control L/N/PE-230VAC-50Hz/fuses/N and PE-terminal block	Bornier secteur commande L/N/PE-230VAC-50Hz/fusibles/distributeur Net PE
X2	Klemmenleiste 24 VAC-Verteiler	Terminal strip 24 VAC-terminal block	Bornier 24 VAC - répartiteur
X3	Klemmenleiste GND-Verteiler für Sensoren R1/-2 und -3 an J2 und R5 u. -6 an J6	Terminal strip GND terminal block for sensors R1/-2 and -3 at J2 and R5 and -6 at J6	Bornier GND - répartiteur pour sondes R1/-2 et 3 sur J2 et R5 et -6 sur J6
X5	Klemmenleiste Leistungseinspeisung 3L/PE-400VAC-50 Hz	Terminal strip power supply 3L/PE-400VAC-50 Hz	Bornier alimentation en puissance 3L/PE-400VAC-50 Hz
X-M1	Klemmkasten von M1	Terminal box of M1	Boîte à bornes de M1
X-M3	Klemmkasten von M3	Terminal box of M3	Boîte à bornes de M3
	Abkürzungen:	**Abbreviations:**	**Abréviations :**
EVS	EVU-Sperreingang	Utility company disable input	Entrée de coupure courant du fournisser de courant
SPR	Zusätzlicher Sperreingang	Supplementary disable input	Entrée de coupure complémentaire
MA	Mischer AUF	Mixer OPEN	Mélangeur OUVERT
MZ	Mischer ZU	Mixer CLOSED	Mélangeur FERME
*	Bauteile sind bauseits beizustellen, bzw. als Zubehör erhältlich	Components to be supplied by the customer, available as accessories	Pièces fournies par le client (disponibles comme accessoires)

4 Hydraulisches Prinzipschema / Hydraulic block diagrams / Schéma hydraulique

4.1 Darstellung / Schematic view / Représentation schématique

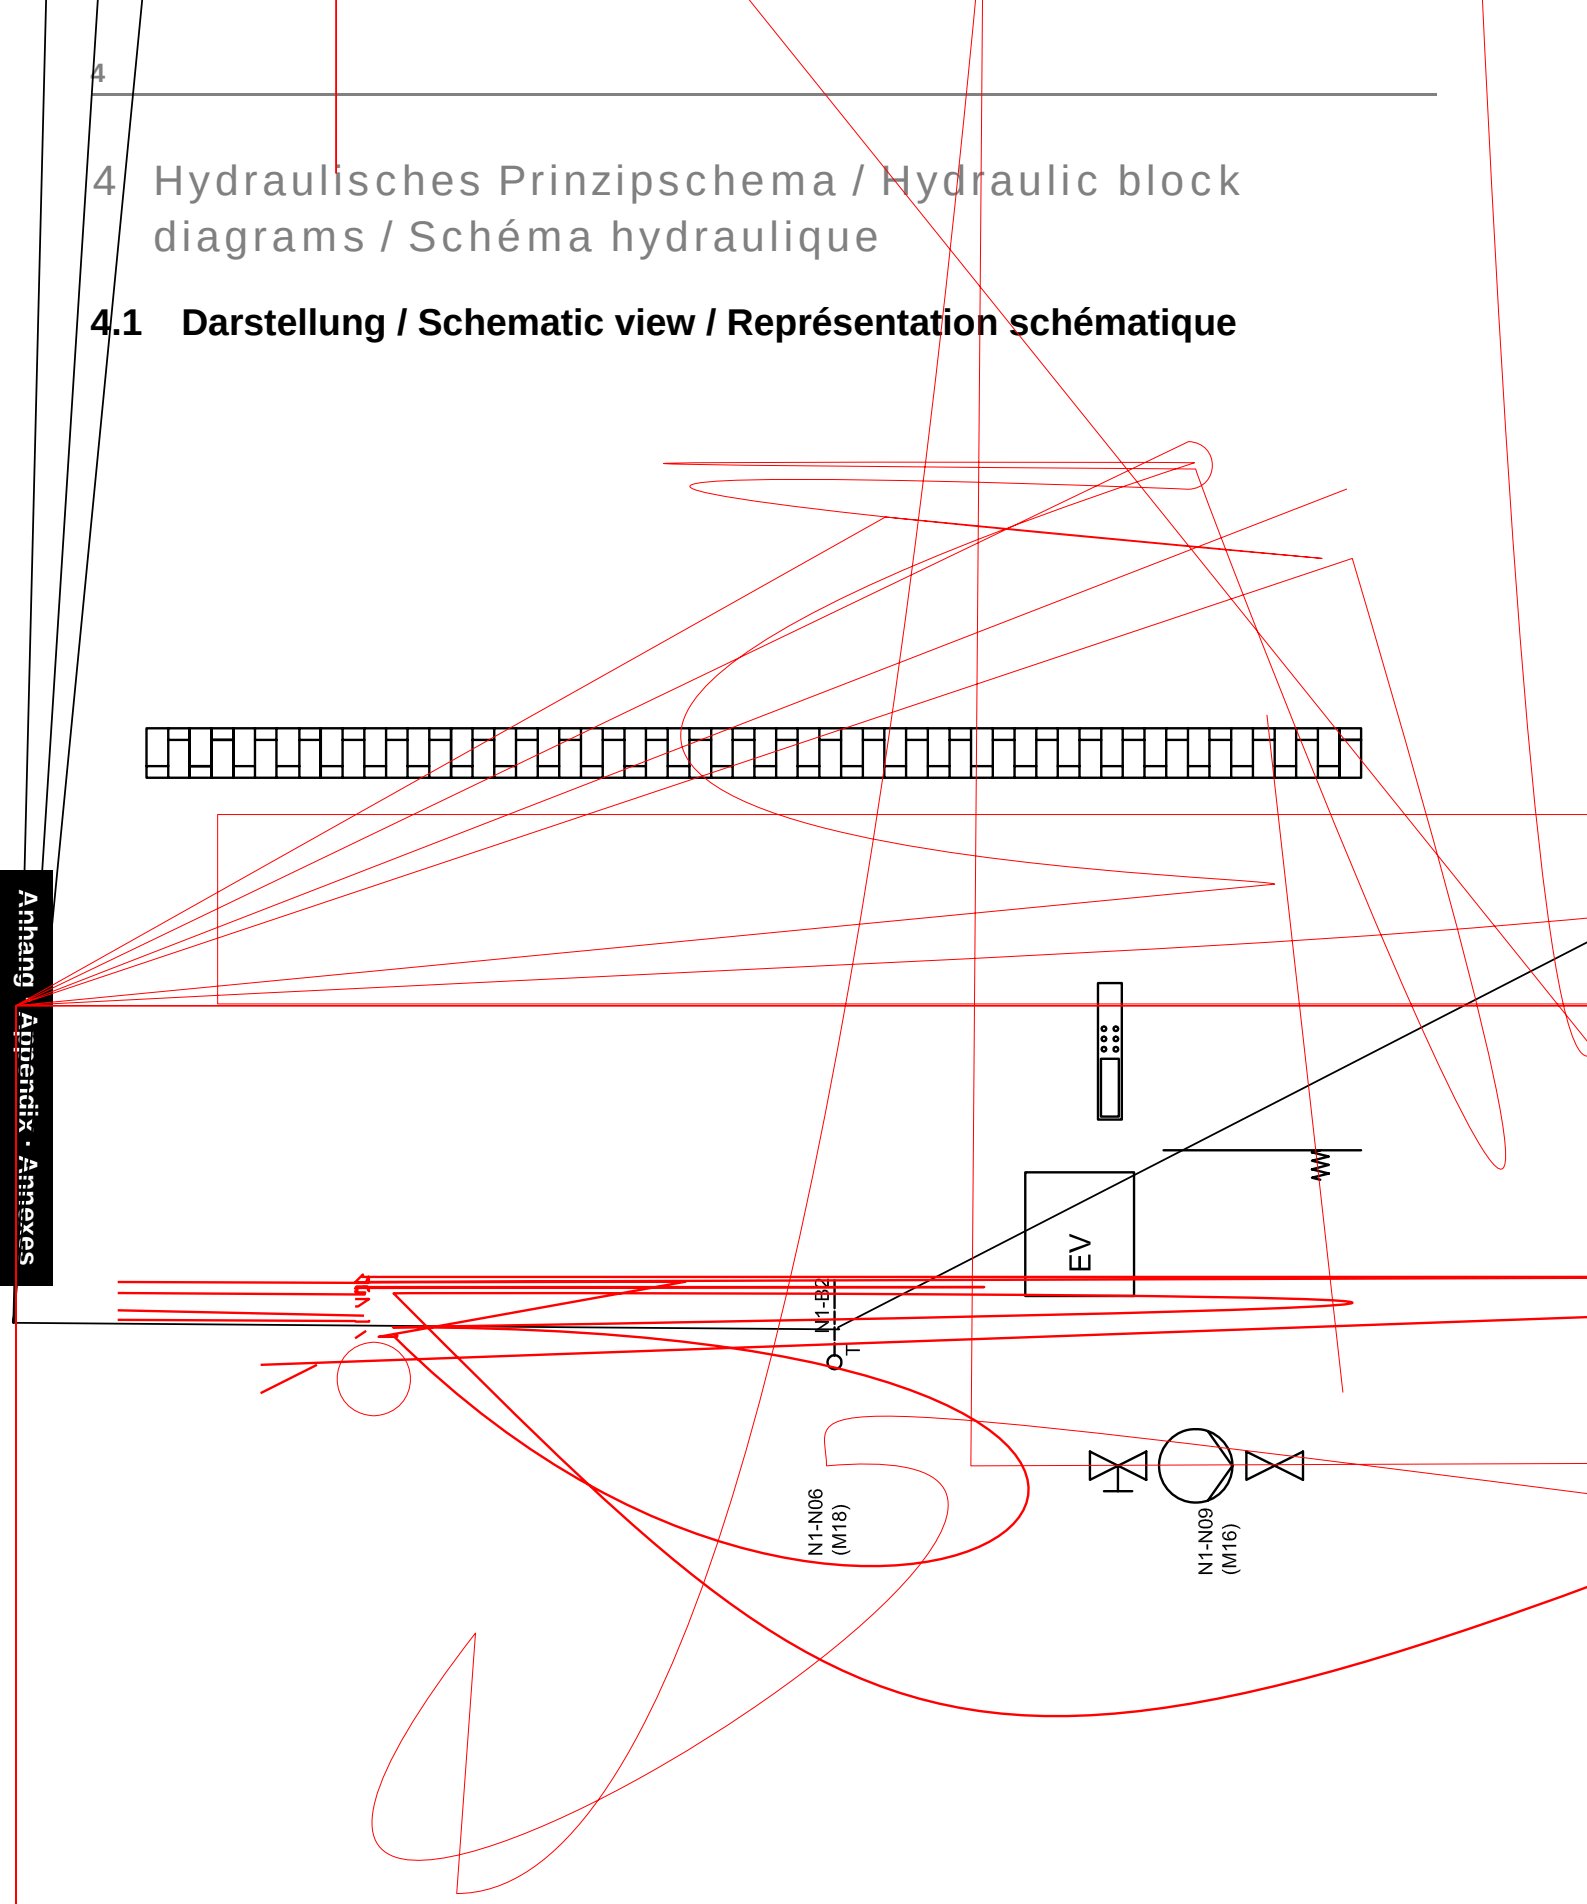

4.2 Legende / Legend / Légende

5 Konformitätserklärung / Declaration of Conformity / Déclaration de conformité

EG - Konformitätserklärung
EC Declaration of Conformity
Déclaration de conformité CE ©

CE

Der Unterzeichnete	***Glen Dimplex Deutschland GmbH***
The undersigned	***Geschäftsbereich Dimplex***
La société soussignée,	***Am Goldenen Feld 18***
	D - 95326 Kulmbach

bestätigt, dass das (die) nachfolgend bezeichnete(n) Gerät(e) aufgrund seiner (ihrer) Konzipierung und Bauart sowie in der von uns in Verkehr gebrachten Ausführung den einschlägigen grundlegenden Anforderungen der EG-Richtlinien entspricht (entsprechen).

Bei einer nicht mit uns abgestimmten Änderung des (der) Gerät(e)s verliert diese Erklärung ihre Gültigkeit.

hereby confirm that the design and construction of the product(s) listed below, in the version(s) placed on the market by us, conform to the relevant requirements of the applicable EC directives.

This declaration becomes invalidated if any modifications are made to the product(s) without our prior authorisation.

certifie que l'appareil / les appareils ci-après, par leur conception et leur mode de construction ainsi que par la définition technique avec laquelle il(s) sont mis en circulation par notre société, est / sont conforme(s) aux directives fondamentales CEE afférentes.

Ce certificat perd sa validité pour tout appareil modifié sans notre consentement.

Bezeichnung / Designation / Désignation	***EG - Richtlinien / EC Directives / Directives CEE***
Sole/Wasser-Wärmepumpen *für Innenaufstellung mit R404A*	*EG- Niederspannungsrichtlinie / EC Low Voltage Directive / Directive CEE relative à la basse tension (73/23/EWG)*
Brine-to-water heat pumps *for indoor installation, containing R404A*	*EG-EMV-Richtlinie / EC EMC Directive / Directive CEE relative à la compatibilité électromagnétique (89/336/EWG)*
Pompes à chaleur eau glycolée/eau *pour installation intérieure avec R404A*	*Druckgeräterichtlinie / Pressure Equipment Directive / Directive CEE relative aux appareils sous pression (97/23/EG)*

Typ(e):	***Harmonisierte EN / Harmonized EB Standards / Normes EN harmonisées:***	
SI 50TE	*EN 255:1997*	
SI 75TE	*EN 378:2000*	
SI 100TE	*DIN 8901*	
SI 130TE	*DIN EN 60335-1 (VDE 0700 T1):2005-07*	*EN 60335-1:2002+A11:2004+A1:2004*
	DIN EN 60335-2-40 (VDE 0700 T40):2004-03	*EN 60335-2-40:2003*
	DIN EN 55014-1 (VDE 0875 T14-1):2003-09	*EN 55014-1:2000+A1:2001+A2:2002*
	DIN EN 55014-2 (VDE 0875 T14-2):2002-08	*EN 55014-2:1997+A1:2001*
	DIN EN 61000-3-2 (VDE 0838 T2):2001-12	*EN 61000-3-2:2000*
	DIN EN 61000-3-3 (VDE 0838 T3):2002-05	*EN 61000-3-3:1995+Corr.:1997+A1:2001*

Nationale Richtlinien / National Directives / Directives nationales

D	***A***	***CH***
VBG20		*SVTI*

Kulmbach, 28.09.2006

CE09W01F.doc

Wolfgang Weinhold
Geschäftsführer / Managing Director

Andreas Tüch
Spartenleiter / Head of business unit

Glen Dimplex Deutschland GmbH
Geschäftsbereich Dimplex
Am Goldenen Feld 18
D-95326 Kulmbach

Irrtümer und Änderungen vorbehalten.
Subject to alterations and errors.
Sous réserve d’erreurs et modifications.

+49 (0) 9221 709 565
www.dimplex.de